


## **Removal & Installation**

### **Air Temperature Actuator**

#### **Air Temperature Actuator Replacement**

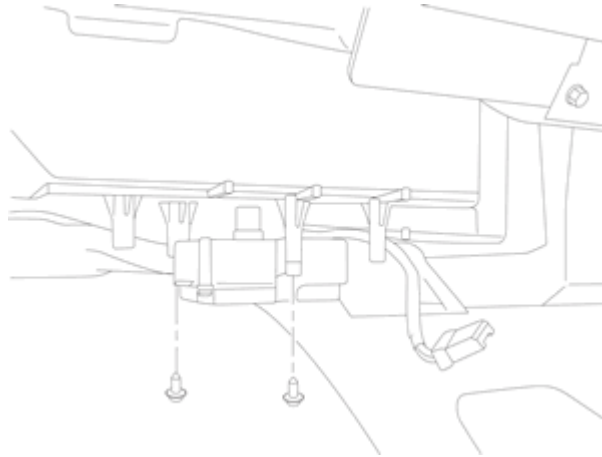

#### **To Remove:**

##### **CAUTION**

Do not apply power to the actuator when it is removed from the HVAC module.

1. Remove the instrument panel hush panel.
2. Disconnect the connector from the air temperature actuator.
3. Remove the air temperature actuator mounting screws.
4. Remove the actuator from the HVAC assembly.

#### **To Install:**

1. Position the air temperature actuator on the HVAC assembly.
2. Install the actuator mounting screws.
3. Install the electrical connect to the air temperature actuator.
4. Install the instrument panel hush panel.