


## Center Pillar Upper Trim Panel Replacement

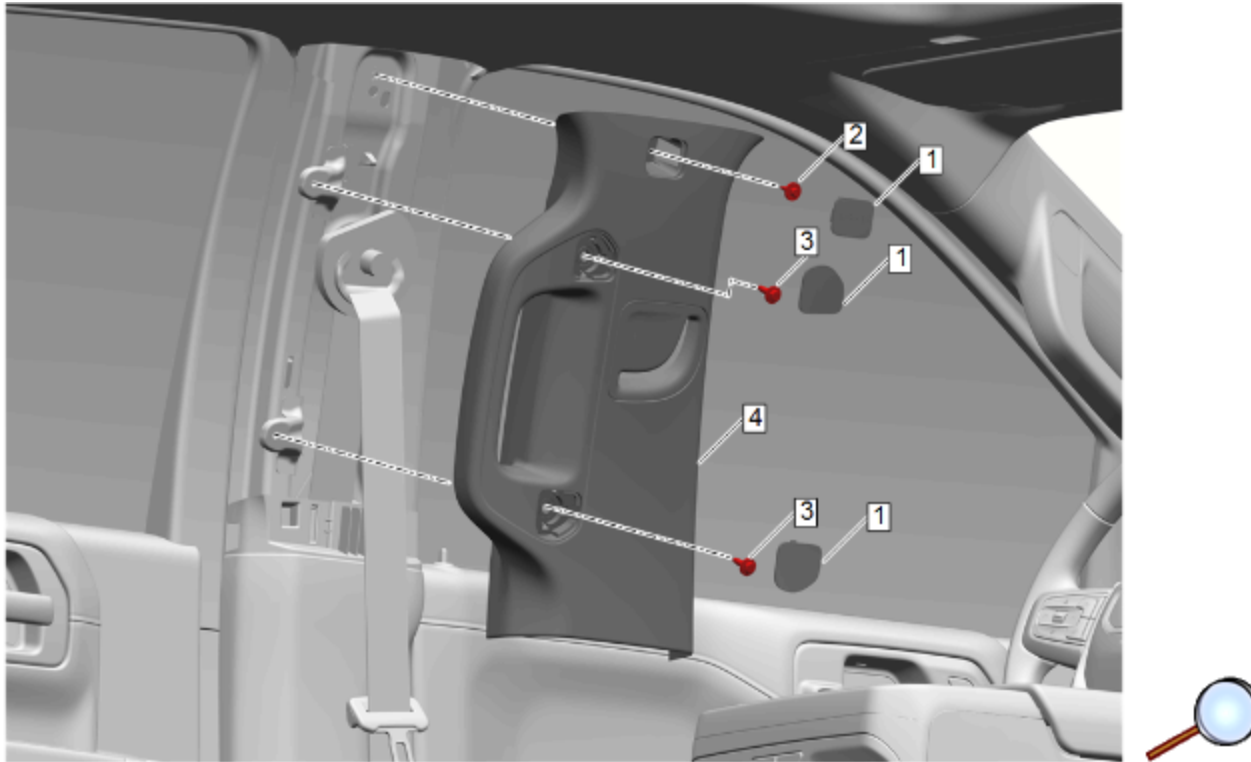

**Center Pillar Upper Trim Panel Replacement**

Callout	Component Name
	<p><b>Caution:</b> Use care when working around the head curtain inflator module. Sharp tools may puncture the curtain airbag. If the head curtain inflator module is damaged in any way, it must be replaced.</p> <p><b>Preliminary Procedures</b></p> <ol style="list-style-type: none"> <li>1. Disable the SIR system. <a href="#">SIR Disabling and Enabling</a></li> <li>2. Remove the driver or passenger seat belt anchor plate tensioner cover and bolt. <a href="#">Front Seat Belt Anchor Plate Tensioner Replacement</a></li> </ol>

Callout	Component Name
1	Center Pillar Upper Trim Panel Bolt Cap [3x] <b>Procedure</b> Use a small flat - bladed tool to open the bolt caps to gain access to the bolts.
2	Center Pillar Upper Garnish Molding Bolt <b>Caution:</b> Refer to <a href="#">Fastener Caution</a> . <b>Tighten</b> 2.5 N•m (22 lb in)
3	Center Pillar Assist Handle Bolt [2x] <b>Tighten</b> 9 N•m (80 lb in)
4	Center Pillar Upper Trim Panel <b>Procedure</b> <ol style="list-style-type: none"> <li>1. Pull the trim panel toward the inside of the vehicle to disengage the retainers.</li> <li>2. When replacing the center pillar upper trim panel, feed the seat belt through the panel.</li> <li>3. Enable the SIR System. <a href="#">SIR Disabling and Enabling</a></li> </ol>