

(No Subject)

From: Brian Quaderer (imagrover@yahoo.com)

To: imagrover@yahoo.com

Date: Friday, June 19, 2020, 09:05 PM EDT


If the indicator light is illuminated, the system is not working.

Engine Heater


When equipped, the engine heater can help start the engine easier during engine warm-up in cold weather conditions (below -18°C (0°F)). Vehicles with an engine heater should be plugged in at least four hours before starting. An internal thermostat in the heater will prevent engine heater operation at temperatures above 10°C (50°F).

Warning

Do not plug in the engine block heater while the vehicle is parked in a garage or under a carport, or damage or personal injury may result. Always park the vehicle in a clear open area away from buildings or structures.

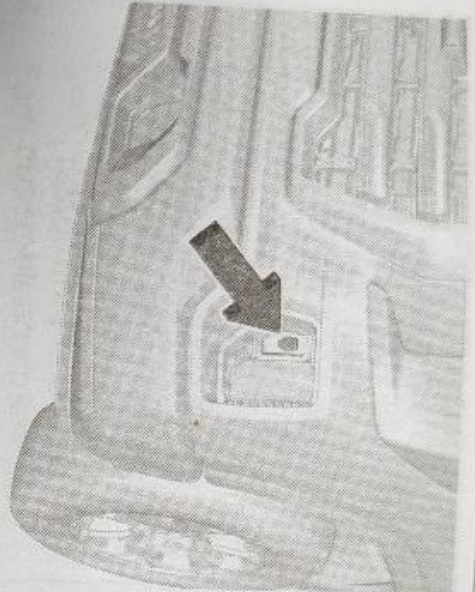

1500 Base Model shown other models are similar

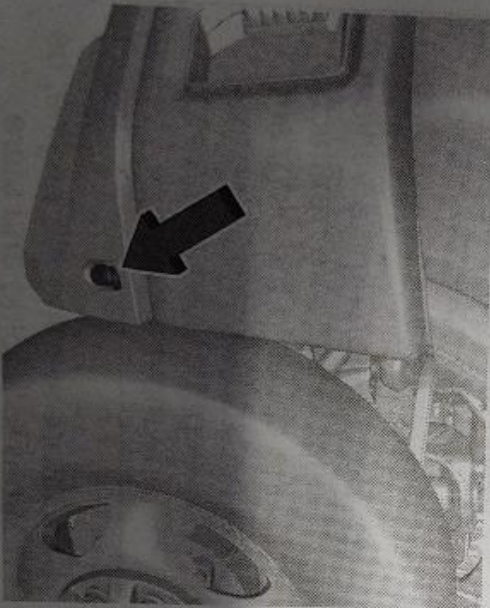


2500/3500

Driving and Operating 215

To Use the Engine Heater

1. Turn off the engine.
2. Check the heater cord for damage. If it is damaged, do not use it. See your dealer for a replacement. Inspect the cord for damage yearly.

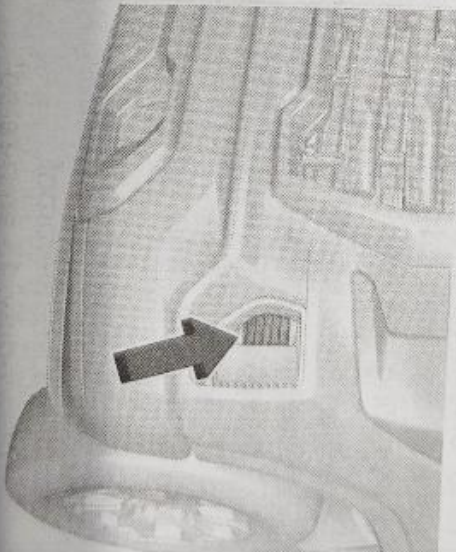

3. 1500 only, remove the engine heater connector cover by gently prying with a flat blade tool.
4. Plug the heater cord into the connector in the front fascia.

[Sent from Yahoo Mail on Android](#)