

Power and Signal Distribution


Electrical Component and Inline Harness Connector End Views

Component Locator

Electrical Center Identification Views

Object-ID=6212883 Owner=Owner, Schematics LMD=10-Feb-2023 LMB=Kalb, William

X50B Battery Distribution Engine Compartment Fuse Block Top View

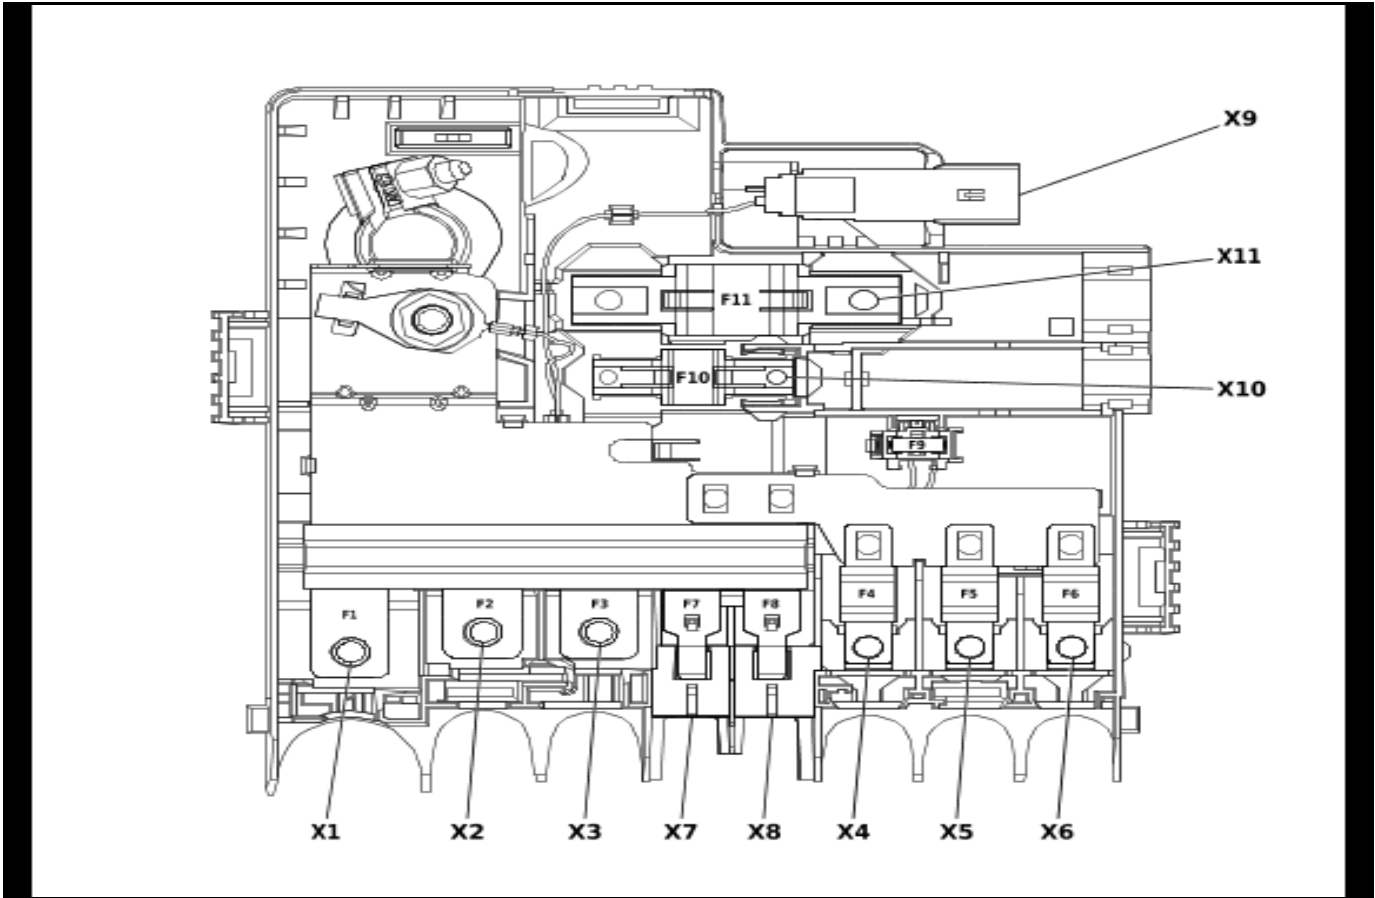

5070128

Usage Table

No.	Device Label Name	Device Assigned Name	Rating	Description
Fuses				
F1	—	F1BA	250A	- G13 Generator - X50A Engine Wiring Harness Junction Block
F2	—	F2BA	175A (L8T) 400A (L5P)	- X50A Engine Wiring Harness Junction Block (L8T) - X50EA Battery Distribution Fuse Block - Auxiliary (L5P)
F3	—	F3BA	400A	M64 Starter Motor
F4	—	F4BA	60A	E40 Air Heater (C3A)
F5	—	F5BA	100A (K4B) 60A (L5P)	- X50EA Battery Distribution Fuse Block - Auxiliary (K4B) - K20 Engine Control Module (L5P)

Usage Table (cont'd)

No.	Device Label Name	Device Assigned Name	Rating	Description
F6	—	F6BA	60A	• K20 Engine Control Module (L5P)
F7	—	F7BA	60A	• X51R Instrument Panel Wiring Harness Junction Block - Right
F8	—	F8BA	60A	• X51R Instrument Panel Wiring Harness Junction Block - Right
F9	—	F9BA	5A	• B110 Battery Sensor Module
F10	—	F10BA	60A	• X51AX Instrument Panel Wiring Harness Junction Block - Right (9L7)