

Fuses	Usage	Fuses	Usage	Fuses	Usage
25	EBCM 1 – Electronic Brake Control Module 1	42	Tail Lamp Left (HD)	60	Powertrain Sensor 2 (DSL)
26	–	44	DEFC/ICCM Ignition (LD/HD)/FTZM Ignition (HD)	61	Active Hydraulic Steering (HD)
27	Horn	45	Secondary Axle Motor	62	DEFC Batt 1/CVS
28	Parking Lamp Mirror/Grill (LD)/Parking Lamp Left (HD)	46	Engine Control Module Ignition	63	Trailer Brake
29	Parking Lamp Right (HD)	47	–	65	–
30	ELM 3 – Electronic Lighting Module 3	48	–	66	Cooling Fan Motor Left (LD)
31	ELM 1 – Electronic Lighting Module 1	49	Transmission Auxiliary Oil Pump (LD)	67	–
32	–	50	A/C Clutch	68	DEFC Batt 2
33	Not R/C	51	Transfer Case Control Module	69	Starter Pinion (LD Gas)/Starter Motor (HD)
34	Radars (LD)	52	Front Wiper	71	Cooling Fan Lower (LD)
37	MISC IP Headliner Ignition	53	Center High-Mounted Stop Lamp	72	Cooling Fan Right (LD)
38	Seat Fan Ignition	54	Tail Lamp Right (HD)	73	Trailer Stop/Turn Lamp Left
39	Trailer Ignition Module	55	Trailer Back-up Lamp	74	Trailer Interface Module 2
40	Misc Ignition	56	SADS (LD)/Fuel Tank Zone Module 2 (HD)	75	Integrated Chassis Control Module
41	Trailer Parking Lamp	57	TTPM/SBZA	76	Electric RNG BDS
		58	Starter Motor (LD)		