

Fuses	Usage
78	Engine Control Module
79	Cabin Cool Pump 17W (LD)/Auxiliary Battery (HD)
80	Powertrain Sensor 1 (DSL)
81	Trailer Stop/Turn Lamp Right
82	Trailer Interface Module 1
83	FTZM 1
84	Trailer Battery
85	–
86	Engine Control Module
87	Injector B Even
88	O2 B Sensor
89	O2 A Sensor
90	Injector A Odd
91	Engine Control Module Throttle Control (HD)

Fuses	Usage
92	Cool Fan Clutch (HD DSL)/Aeroshutter (LD/HD)
Relays	Usage
5	Rear Window Defogger
18	DC/AC Inverter
23	Fuel Heater (DSL)
35	Parking Lamp
36	Run/Crank
43	Secondary Axle Motor
59	A/C Clutch
64	Starter Motor (LD)/Cool Fan Clutch (HD DSL)
70	Starter Pinion (LD Gas)/Starter Motor (HD)
77	Powertrain

Instrument Panel Fuse Block (Left)



The left instrument panel fuse block access door is on the driver side edge of the instrument panel.

The vehicle may not be equipped with all of the fuses, relays, and features shown.

Pull off the cover to access the fuse block. A fuse puller is available on the left instrument panel end cap.