


Front Stabilizer Shaft Link Replacement


Removal Procedure

1. Remove the front tire and wheel assembly. [Tire and Wheel Removal and Installation](#)

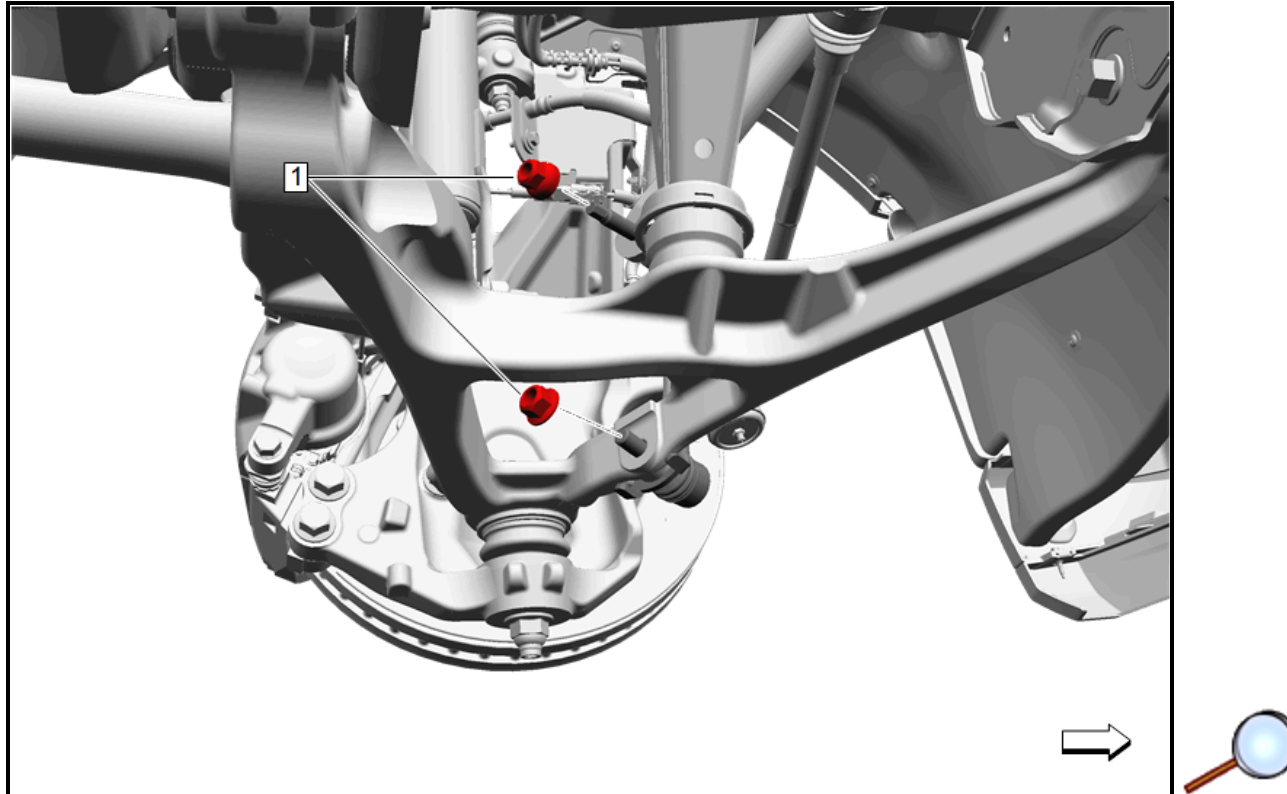


© 2024 General Motors. All rights reserved.

- Note:** Note the style and location of the front stabilizer shaft link nuts for proper installation.
2. Front Stabilizer Shaft Link Nut (1) » Remove [2x]

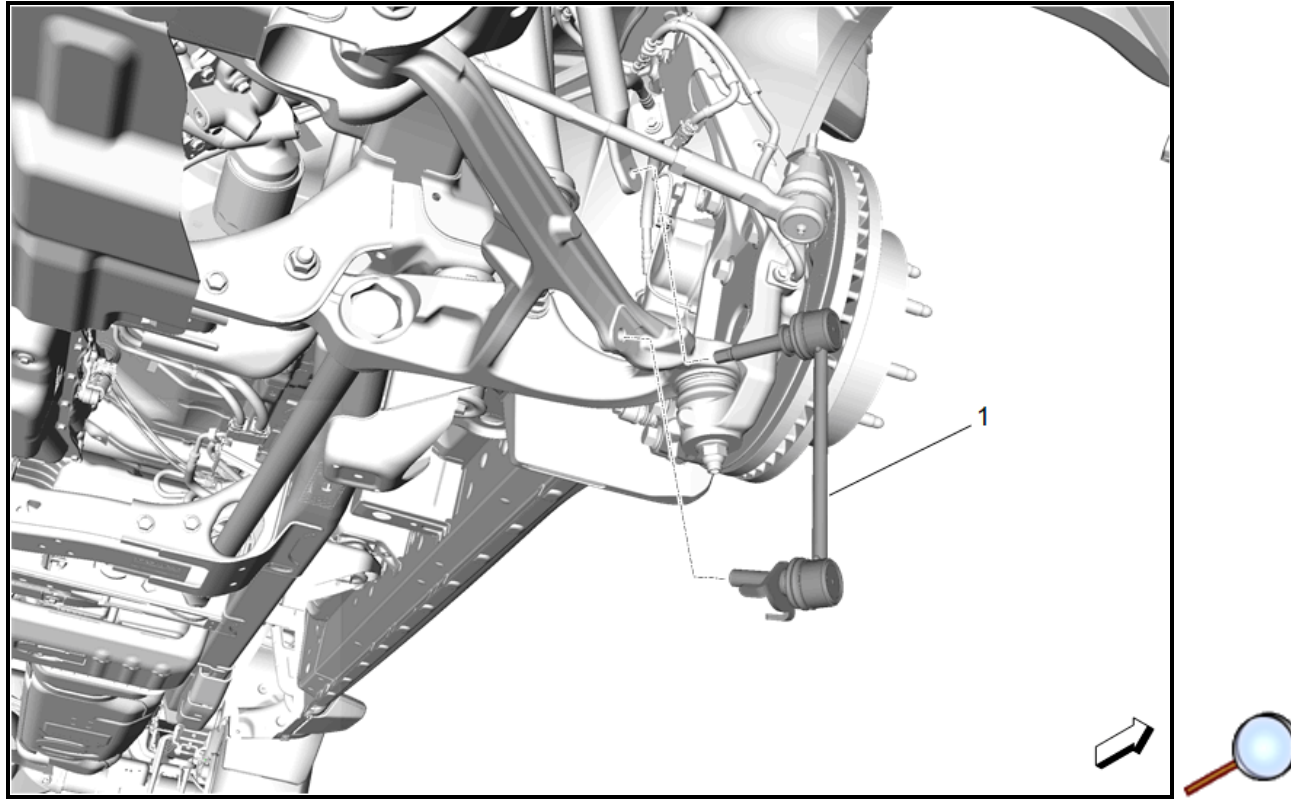


3. Front Stabilizer Shaft Link (1) » Remove

Installation Procedure

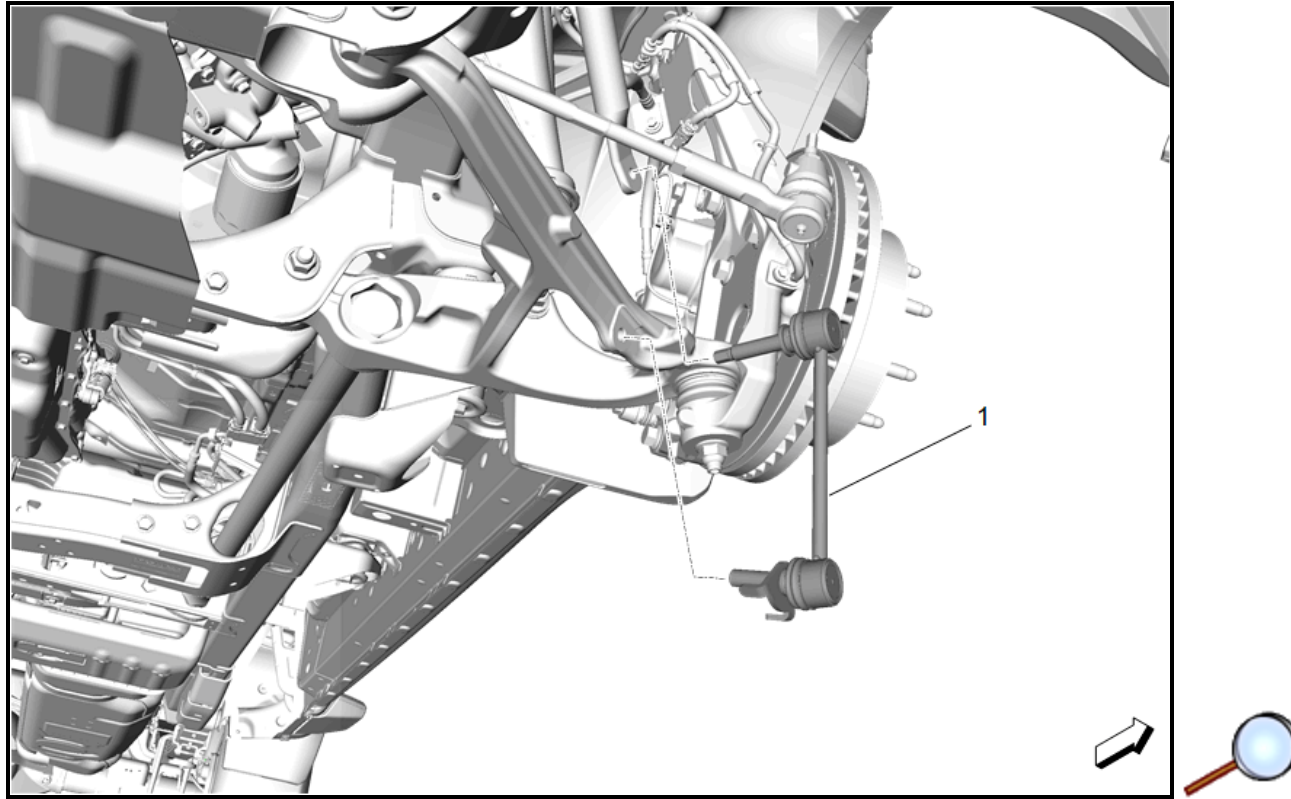

1. Front Stabilizer Shaft Link (1) » Install

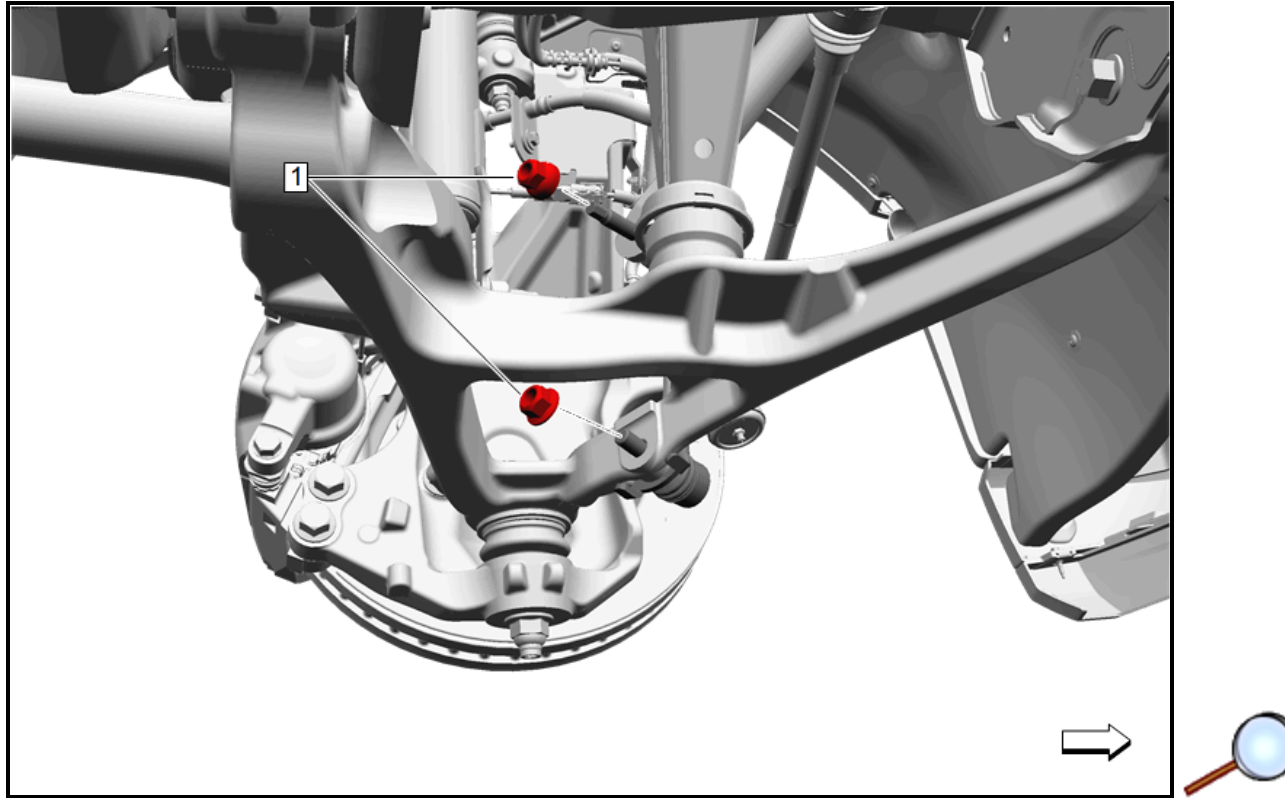

Caution: Refer to [Fastener Caution](#).

Note: Note the style and location of the front stabilizer shaft link nuts for proper installation.

2. Front Stabilizer Shaft Link Nut (1) » Install and tighten [2x] — [Fastener Specifications](#)
3. Install the front tire and wheel assembly. [Tire and Wheel Removal and Installation](#)