


<- Back

Forward ->

Document ID# 723625
2002 Chevrolet Tahoe - 2WD

Print

Steering Column Trim Covers - Disassemble - Off Vehicle Column Shift Snap On Shrouds

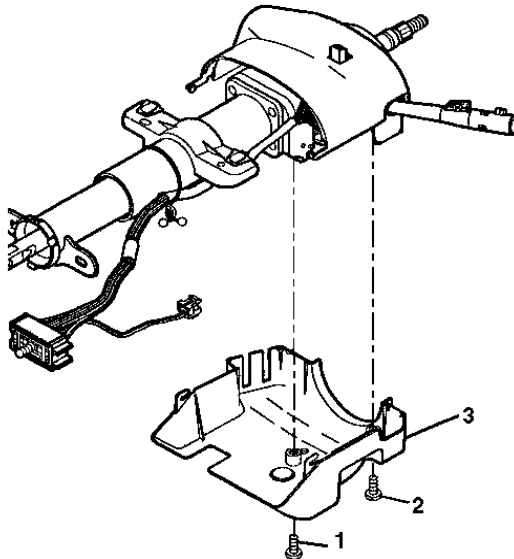

Caution

This vehicle is equipped with a Supplemental Inflatable Restraint (SIR) System. Failure to follow the correct procedure could cause the following conditions:

- 1. Air bag deployment**
- 2. Personal injury**
- 3. Unnecessary SIR system repairs**

In order to avoid the above conditions, observe the following guidelines:

- 1. Refer to SIR Component Views in order to determine if you are performing service on or near the SIR components or the SIR wiring.**
- 2. If you are performing service on or near the SIR components or the SIR wiring, disable the SIR system. Refer to Disabling the SIR System in SIR.**


1. Disable the inflatable restraint steering wheel module. Refer to [Disabling the SIR System](#) in SIR.
2. Remove the steering wheel from the column. Refer to [Steering Wheel Replacement](#) .
3. Remove the tilt lever from the lower trim cover. Refer to [Tilt Lever Replacement - On Vehicle](#) .

Important


You must check for 2 pan head tapping screws (1,2) in the lower trim cover before removal.

4. If necessary, remove the 2 pan head tapping screws (1,2) from the lower trim cover (3). Remove the lower trim cover (3).

If screws are not present in the lower trim cover, proceed to the next step.

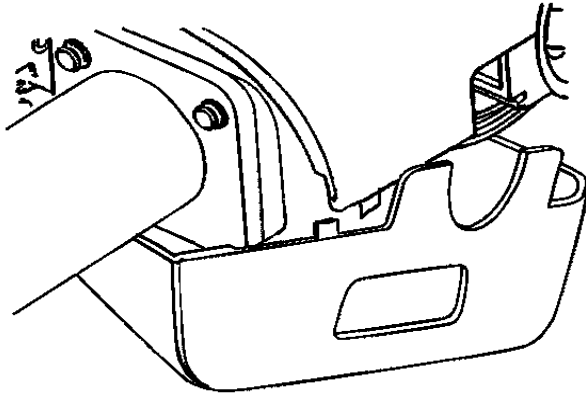

5. Gently unsnap the lower trim cover from the upper trim cover.

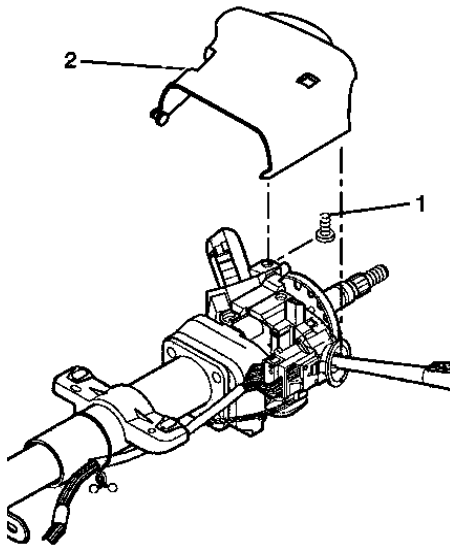

Important

You must check for 2 pan head tapping screws (1,2) in the lower trim cover (3) before removal.

6. If necessary, remove 1 TORX® head screw (1) from the upper trim cover (2).
If a screw is not present, remove the upper trim cover (2).

[<- Back](#)[Forward ->](#)

Document ID# 723625
2002 Chevrolet Tahoe - 2WD

[Print](#)