



## Mirror Replacement

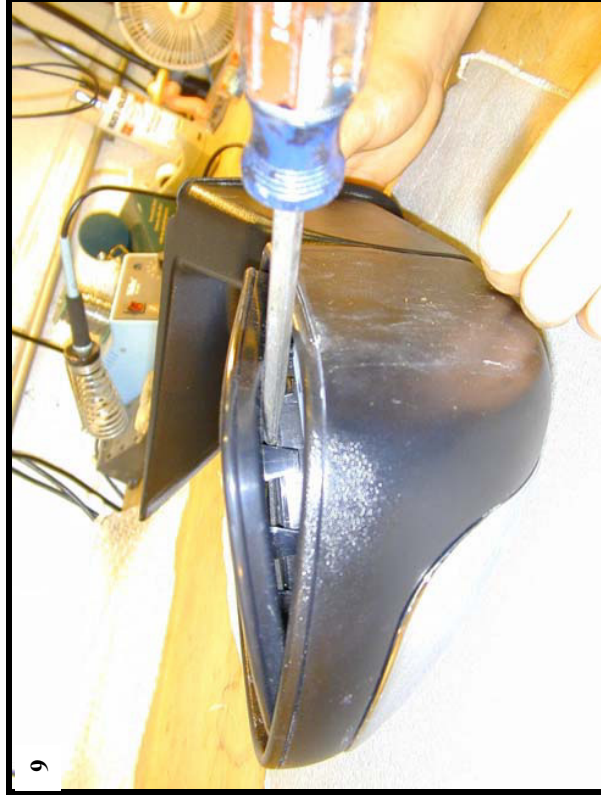

9

**Caution: Safety glasses and sturdy gloves are recommended for the following steps.**

9. Place the mirror housing on a clean level surface. Push on the outer edge of the mirror to manually pivot it fully outward so a flat head screwdriver can be inserted under its inner edge between the backplate and motor actuator. Gently twist and pull on the screwdriver until backplate dislodges from motor actuator. Repeat the process by moving the screwdriver around until backplate unsnaps from motor actuator. **NOTE: If you have heated mirrors, disconnect the heater wires from the heater terminals. The polarity on the heater terminals is reversible so it is not necessary to label the terminals.** Remove OE mirror from mirror housing.

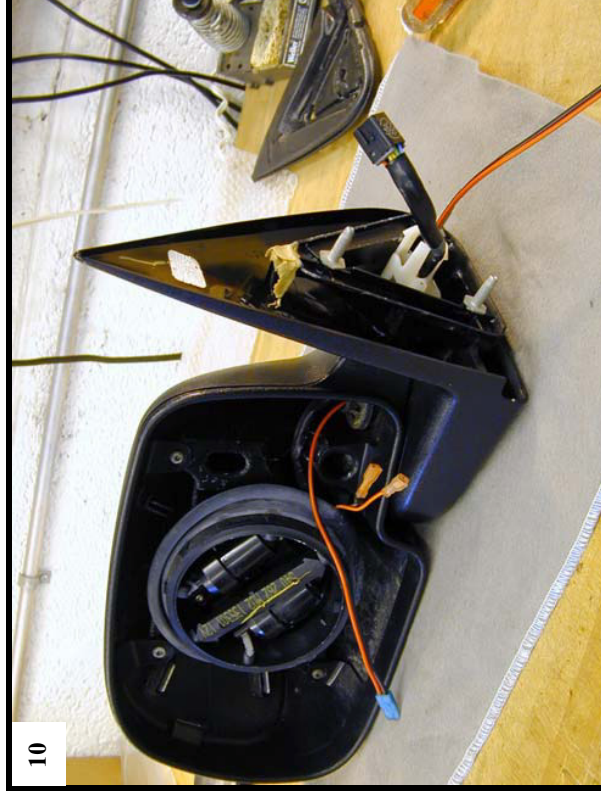

10

10. Remove the rubber insulation on the mirror mounting frame to expose the wire routing passage. Locate the correct Signal<sup>®</sup> mirror harness (short for driver side and long for passenger side). Slide the end with no connector through the routing passage (from the inside of the mirror housing) and through the hole in the rubber insulation. Attach the rubber insulation to the mirror mounting frame. Pull the harness through leaving about 6 inches of slack in the harness near the motor pack.