


## Mirror Replacement Continues

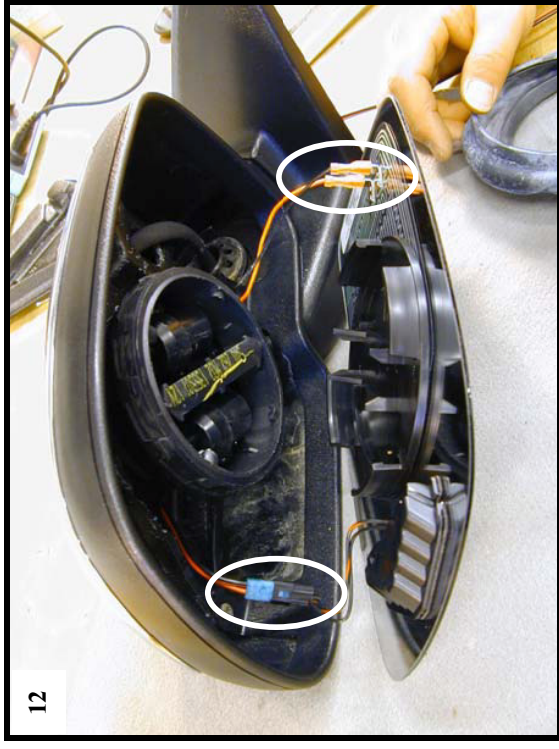

11. For both driver and passenger side mirrors, remove the rubber boot around the motor actuator **PRIOR** to installing the *Signal*® mirror into the mirror housing. **NOTE: Permanent removal of rubber boot, by pulling it over the motor, is required for this application and will not negatively affect operation or durability, per the mirror motor manufacturer.**
12. Connect the *Signal*® mirror to the wiring harness plug. **If heated**, reconnect the heater wires to the heater terminals on the *Signal*® mirror.
13. Align the motor mount with the motor actuator. Place the palm of your hand on the center of the glass and press firmly until you hear the snaps engage onto the motor puck. Press on the top, bottom and both sides of the mirror to ensure complete attachment to the motor puck. (Mirror should be pivoted through its full range of travel during this step.)