

Tailgate Gap Spacer Package Installation

Kit Contents

Tailgate Gap Spacer Package Installation

Description	Quantity
Strip Package	1
Alcohol Prep Pad	2
Installation Instructions	1

Tools Required

- Soft, lint-free towels
- Screwdriver


Preparation – Before Installation

1. If existing parts are installed, carefully remove them. Use approved adhesive remover to remove any adhesive residue
2. After opening the kit, check to see if any parts are missing and that the part is not damaged
3. This product should be installed with proper installation tools
4. Install this product while observing all warnings and precautions stated in this instruction sheet
5. Thoroughly wash entire surface area where parts will be adhered to

Installation Procedure – Standard Tailgate


Step 1:

Remove the 10 fasteners shown on image. Place the fasteners aside as they will need to be used at the end to fasten the liner back to the tailgate after installation of the Gap Spacer. Remove the tailgate liner and expose the sheet metal underneath.

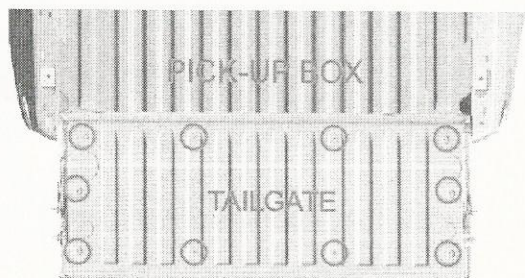


Step 2:

Wipe the highlighted areas with a lint-free rag to clean of all debris. Use alcohol swabs to prep that area for the part.

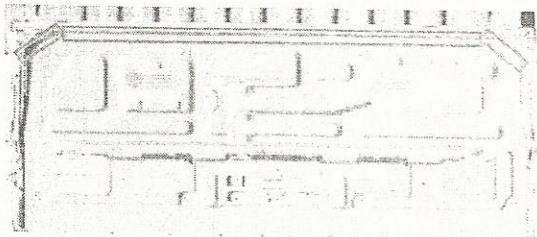

Step 3:


Line up the Gap Spacer on the Sheet Metal prior to exposing the tape. When the Gap Spacer is on the sheet metal, make sure that the Gap Spacer has full contact with the sheet metal.

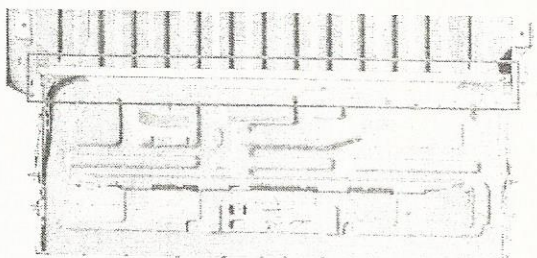

The Gap Spacer is intended to fit securely against the pickup box. The rubber lip of the Gap Spacer is to fit underneath the edge of the Gap Spacer. The fitment is shown below.




The Gap Spacer has a designed gap from the part to the bracket on the tailgate. Below is the correct orientation of the Gap Spacer when installed.

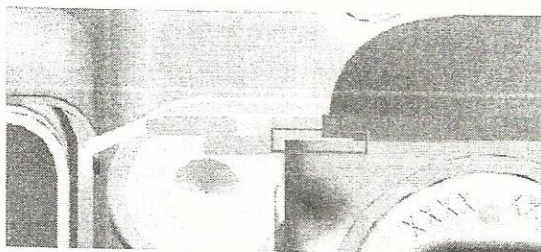

Step 4:


Re-fasten down the tailgate liner using the (10) fasteners removed in step #1. This will secure the Gap Spacer.

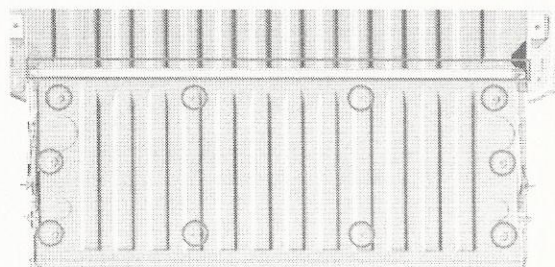

Installation Procedure – Multi-Pro Tailgate


Step 1:

Remove the 10 fasteners shown on image. Place the fasteners aside as they will need to be used at the end to fasten the liner back to the tailgate after installation of the Gap Spacer. Remove the tailgate liner and expose the sheet metal underneath.

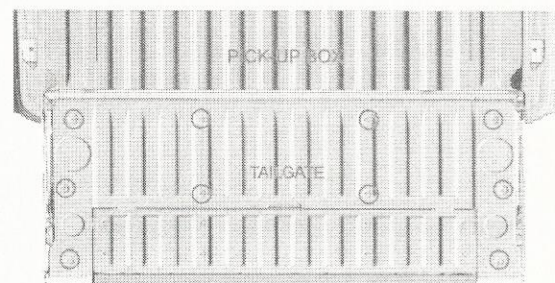

Step 2:

Wipe the highlighted areas with a lint-free rag to clean of all debris. Use alcohol swabs to prep that area for the part.

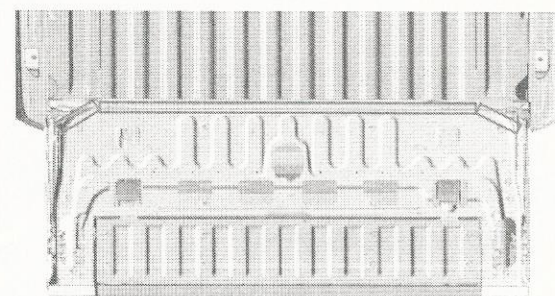

Step 3:

Line up the Gap Spacer on the Sheet Metal prior to exposing the tape. When the Gap Spacer is on the sheet metal, make sure that the Gap Spacer has full contact with the sheet metal.



The Gap Spacer is intended to fit securely against the pickup box. The rubber lip of the Gap Spacer is to fit underneath the edge of the Gap Spacer. The fitment is shown below.



The Gap Spacer has a designed gap from the part to the bracket on the tailgate. Below is the correct orientation of the Gap Spacer when installed.



Step 4:

Re-fasten down the tailgate liner using the (10) fasteners removed in step #1. This will secure the Gap Spacer.

