


Trim Panel Replacement - Side Front Door


Removal Procedure

1. Remove the door handle bezel. Refer to [Handle Bezel Replacement - Inside](#) .
2. Remove the window handle, if equipped. Refer to [Window Handle Replacement](#) .
3. Remove the power accessory switch panel. Refer to [Power Accessory Switch Panel Replacement](#) .
4. Remove the upper extension of the trim panel. Refer to [Trim Panel Replacement - Upper Extension](#) .
5. Remove the manual lock lever from the trim panel using a flat bladed tool.
6. Remove the trim panel screws.

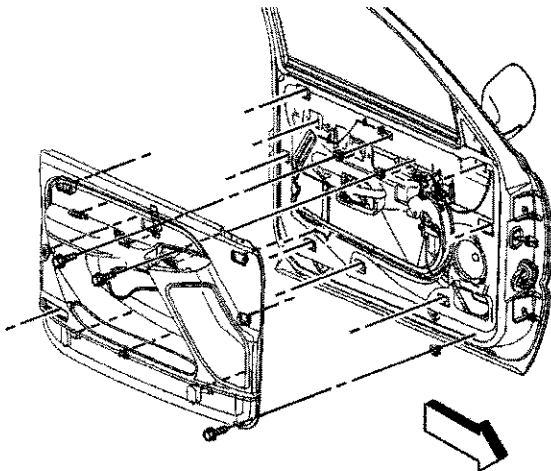

7. Remove the courtesy lamp, if equipped. Refer to [Courtesy Lamp/Reflector Replacement - Door](#) .
8. Remove the trim panel from the door. Carefully slide the trim panel up in order to release the retainers from the door.
9. Disconnect the electrical connectors.

Installation Procedure

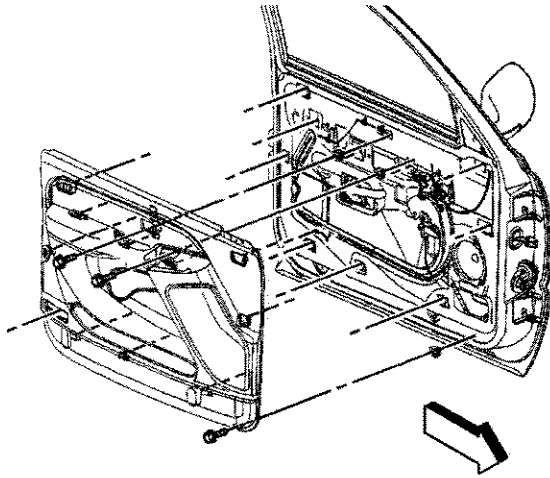

1. Connect the electrical connectors.
2. Install the courtesy lamp, if equipped. Refer to [Courtesy Lamp/Reflector Replacement - Door](#).
3. Carefully align the panel, and slide the panel into the retainer slots in order to install the trim panel to the door.
4. Install the window handle, if equipped. Refer to [Window Handle Replacement](#).
5. Install the power accessory switch panel. Refer to [Power Accessory Switch Panel Replacement](#).
6. Install the trim panel screws. **Tighten**

Tighten the trim panel screws to 2 N·m (18 lb in).

7. Install the manual lock lever to the trim panel.
8. Install the upper extension of the trim panel. Refer to [Trim Panel Replacement - Upper Extension](#).
9. Install the door handle bezel. Refer to [Handle Bezel Replacement - Inside](#).

[<- Back](#)

[Forward ->](#)


Document ID# 764598
2002 Chevrolet Chevy C Silverado - 2WD

[Print](#)

Handle Bezel Replacement - Inside


Removal Procedure


1. Insert a flat-bladed tool between the door handle bezel and the trim panel in order to release the handle bezel tab retainers.

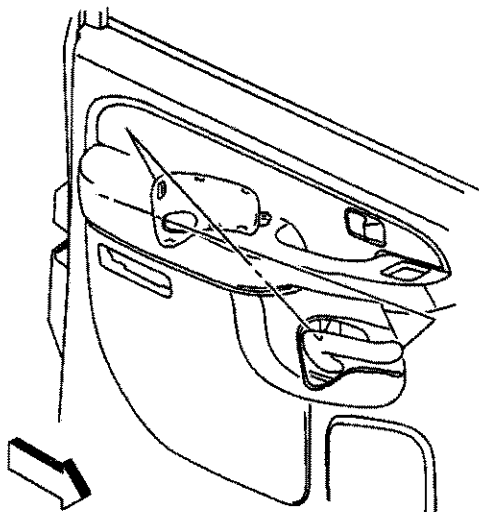

2. Remove the door handle bezel from the door panel.

Installation Procedure

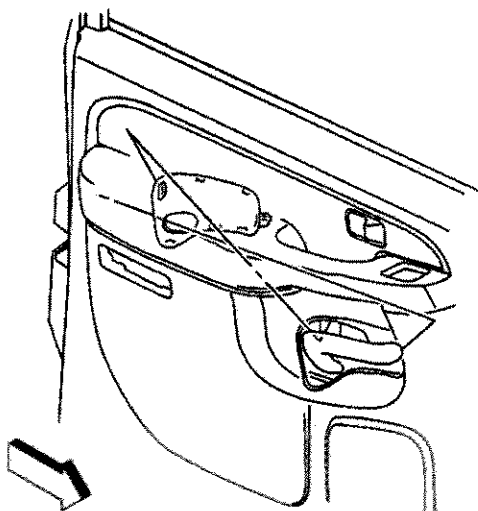

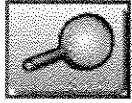

1. Position the door handle bezel in the door trim panel.
2. Install the door handle bezel to the door panel by pressing the bezel into place until the bezel is completely seated.

<- Back


Forward ->

Document ID# 764423
2002 Chevrolet Chevy C Silverado - 2WD

Print

Power Accessory Switch Panel Replacement

Removal Procedure

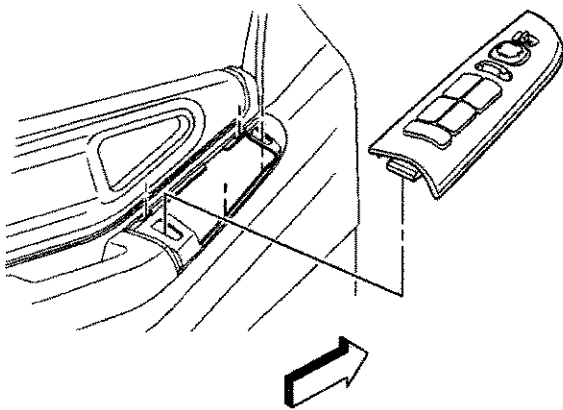



1. Insert a flat-bladed tool into the slots on the power accessory switch panel in order to release the retainer clips.
2. Remove the switch panel.
3. Disconnect the electrical connectors from the switches.
4. Remove the screws from the switches.
5. Remove the power accessory switches from the switch panel.

Installation Procedure

1. Install the power accessory switches to the switch panel. **Tighten**

Tighten the power accessory switch screws to 2 N·m (18 lb in).

2. Connect the electrical connectors to the switches.

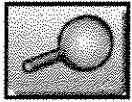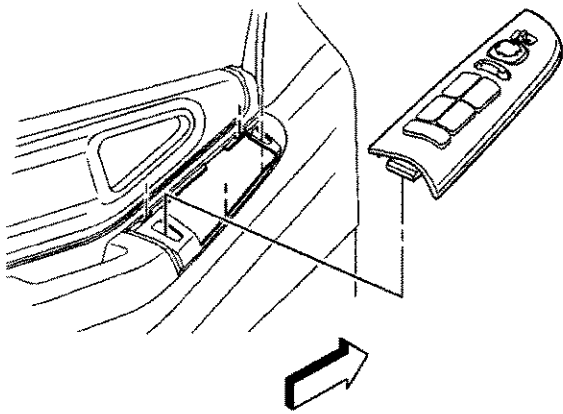

3. Position the switch panel to the door panel.
4. Install the switch panel by pressing the switch panel into place until fully seated.

[<- Back](#)

[Forward ->](#)

Document ID# 536754
2002 Chevrolet Chevy C Silverado - 2WD

[Print](#)


Window Handle Replacement

Tools Required

J 9886-01 Door Handle Clip Remover


Removal Procedure

1. Open the door.

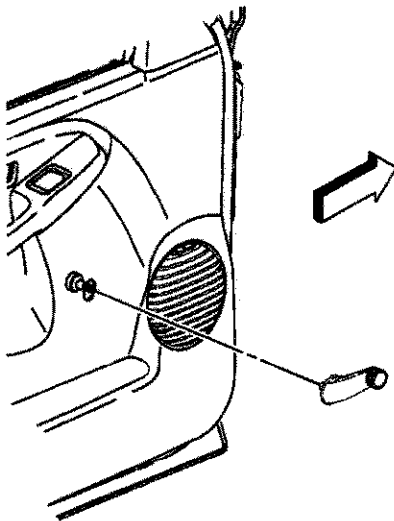

2. Remove the window crank handle using the J 9886-01 . Be sure to retain the retainer clip on the back side of the handle.

Installation Procedure

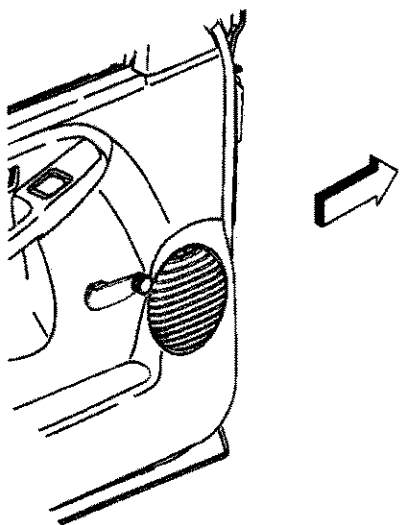

1. Install the window crank handle by pushing the handle into place. Ensure that the retainer engages.
2. Inspect the operation.



[<- Back](#) [Forward ->](#)

Document ID# 443366
2002 Chevrolet Chevy C Silverado - 2WD

[Print](#)



Courtesy Lamp/Reflector Replacement - Door

Removal Procedure

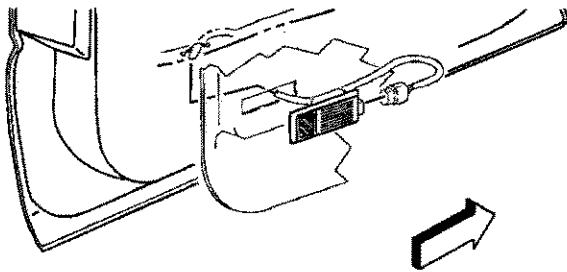

1. Gently push the assembly toward the front edge of the door.
2. Lift the rear of the assembly from the door by using a small flat tool.
3. Remove the courtesy lamp/reflector from the door panel.
4. Twist and remove the socket container from the housing.
5. Remove the bulb from the socket (if replacement is required).

Installation Procedure

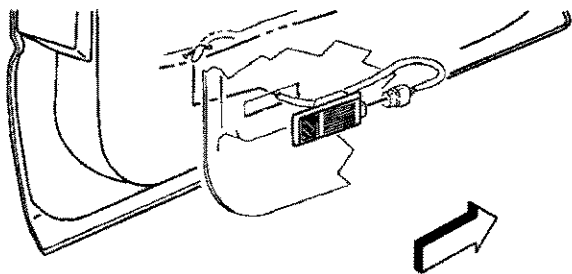

1. Install the bulb into the socket.
2. Install the lens to the vehicle.
3. Install the bulb and socket assembly into the housing into the lens (if equipped).
4. Insert the tab on the assembly into the slot in the door panel at the front edge.
5. Pivot the assembly into the door panel.
6. Press the lens at the rear until the lens snaps into place.

[<- Back](#)

[Forward ->](#)

Document ID# 619853
2002 Chevrolet Chevy C Silverado - 2WD

[Print](#)