



► [GM-Trucks.com](#) > [Tech Resource Wiki](#) > [Maintenance Guides](#) > [Removing Door Panels - '99-'02](#)

Sidebar

Navigation

- [Wiki Home](#)
- [Search](#)
- [New articles](#)
- [Most viewed articles](#)
- [Random article](#)
- [Manage subscriptions](#)

Recent edits

- [2005 Equinox Fa...](#) by [M. Cueva](#)
Jul 21 2009, 08:23 PM
- [2005 Equinox Fa...](#) by [M. Cueva](#)
Jul 21 2009, 08:23 PM
- [2005 Equinox](#) by [M. Cueva](#)
Jul 20 2009, 10:01 PM
- [2001 Hvac Repai...](#) by [M. Cueva](#)
Jun 30 2009, 08:55 PM
- [Oxvaen Sensor](#) by [M. Cueva](#)
May 30 2009, 07:35 AM
- [Fuel Injector R...](#) by [M. Cueva](#)
May 27 2009, 08:15 AM
- [Test Article](#) by [M. Cueva](#)
May 16 2009, 02:33 PM
- [Tailgate](#) by [M. Cueva](#)
May 15 2009, 09:52 PM



Removing Door Panels - '99-'02



This should work for all '99-'02 trucks. I've never posted one of these things before, so I don't really know how to do this...

Step 1: Remove the triangular piece that covers where the door mirror mounts. Start at the top and tilt it outwards.






Step 2: Remove the lock cover with a flat-head screwdriver.



Step 3: Remove the cover behind the door handle. It may take some jiggling to get it over the handle.

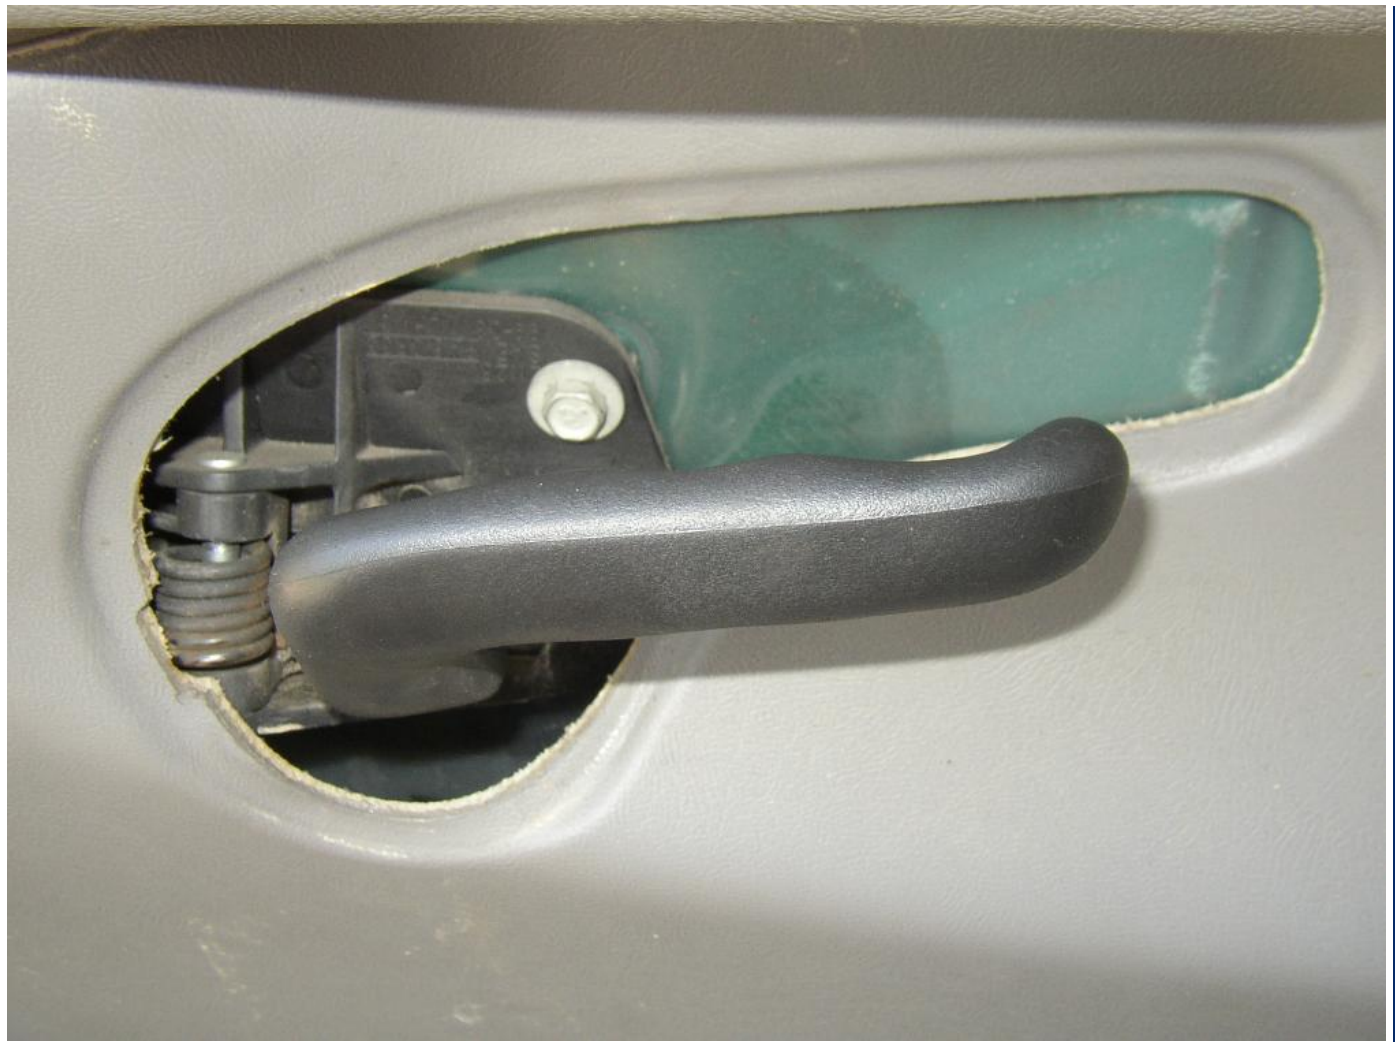


Step 4: Gently pry up on the piece that the lock/window switches are on. Once you get that off, unplug all of the wires/clips.





Step 5: Next remove the two 7mm screws. One is behind where the piece with the plugs was, and the other is behind the armrest/handle thingy.

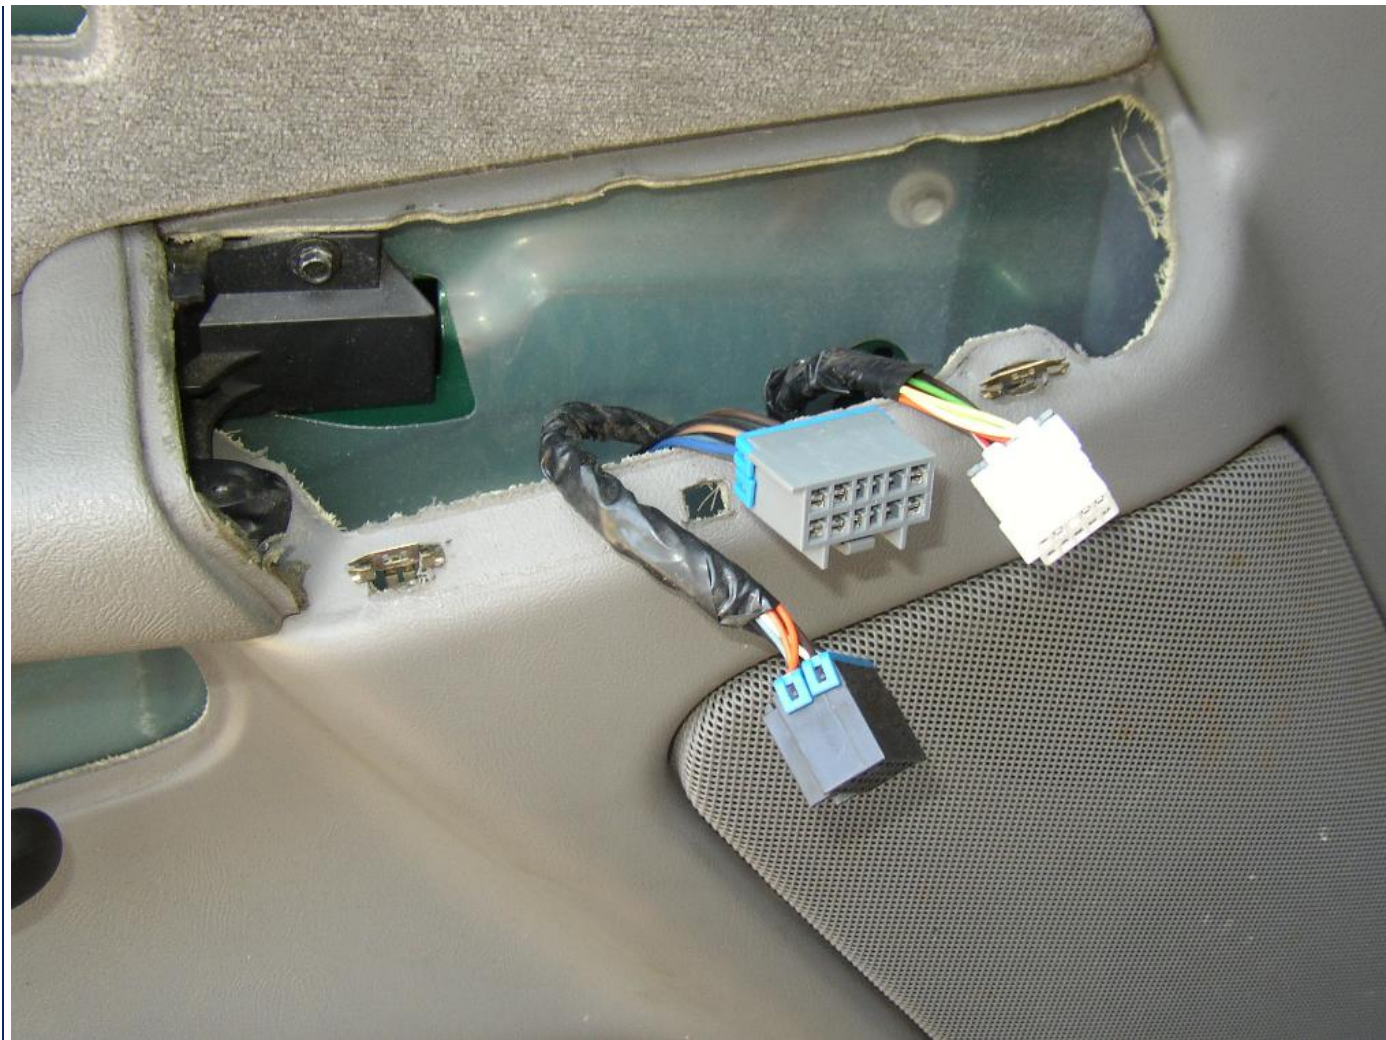

[img]http://i213.photobucket.com/albums/cc275/2000Silverado4x4/11.jpg[/img] [img]http://i213.photobucket.com/albums/cc275/2000Silverado4x4/12.jpg[/img]
[img]http://i213.photobucket.com/albums/cc275/2000Silverado4x4/13.jpg[/img] [img]http://i213.photobucket.com/albums/cc275/2000Silverado4x4/14.jpg[/img]
[img]http://i213.photobucket.com/albums/cc275/2000Silverado4x4/15.jpg[/img]

Step 6: Grab the armrest handle and pull up. The whole panel should come up pretty easily. Once it is free, DON'T pull it away or put it on the ground yet.

[img]http://i213.photobucket.com/albums/cc275/2000Silverado4x4/16.jpg[/img]

Step whatever: unclip the wire for the tweeter

[img]http://i213.photobucket.com/albums/cc275/2000Silverado4x4/17.jpg[/img]

Last step!!!: The last thing to do is to remove the light bulb at the bottom left of the door. To do this, simply grab the black plastic clip and pull it out horizontally.

[img]http://i213.photobucket.com/albums/cc275/2000Silverado4x4/18.jpg[/img] [img]http://i213.photobucket.com/albums/cc275/2000Silverado4x4/19.jpg[/img]

[img]http://i213.photobucket.com/albums/cc275/2000Silverado4x4/20.jpg[/img]

STEP DONE!!! Take the door panel and put it wherever you want, and give yourself a pat on the back.

[img]http://i213.photobucket.com/albums/cc275/2000Silverado4x4/21.jpg[/img]

Last update: Jul 7 2008, 12:30 PM by [i.roffel](#) Created: Jan 29 2008, 08:30 PM by [DV2000N](#) Edits: 18 Views: 1727

