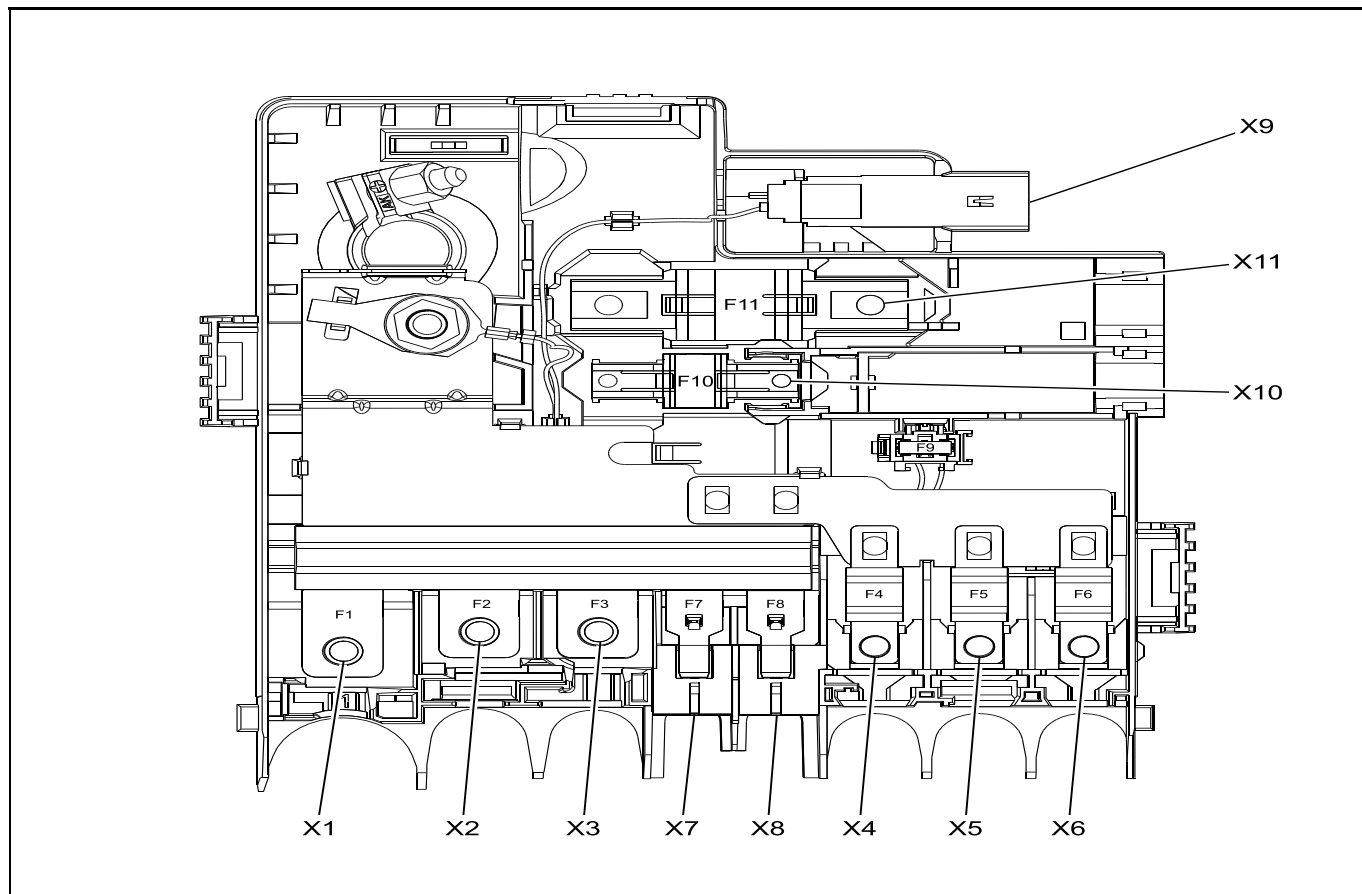


X50B Fuse Block - Underhood Auxiliary (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
30	0.5	VT/GN	4320	Selective Catalytic Reduction Power Module Wake-Up Signal	III	—
31	2.5	VT/BU	3674	NOx Sensor 1 Control	II	—
32	2.5	VT/GN	355	Fuel Filter Heater Voltage	II	—
33	2.5	BU	3921	DEF Heater Supply 1	II	—
34	0.5	RD/BU	4540	Battery Positive Voltage	III	—

X50D Fuse Block - Battery Top View

5070128

Usage Table

No.	Device Label Name	Device Assigned Name	Rating	Description
Fuses				
F1	—	F1UD	175A (LV3/ L82/L84/ L87) 250A (L3B/ LM2)	• G13 Generator • X50A Fuse Block - Underhood
F2	—	F2UD	175A	• K43 Power Steering Control Module
F3	—	F3UD	400A	• M64 Starter Motor
F4	—	F4UD	100A	• E40 Electrical Auxiliary Heater (C32)
F5	—	F5UD	80A	• K34 Glow Plug Control Module (LM2)
F6	—	F6UD	80A	• G59 Engine Coolant Pump (L3B) • G10R Cooling Fan Motor - Right (LM2)
F7	—	F7UD	60A	• X51R Fuse Block - Instrument Panel Right
F8	—	F8UD	60A	• K160 Brake System Control Module
F9	—	F9UD	5A	• B110 Battery Sensor Module (KL9) • K9 Body Control Module (-KL9)
F10	—	F10UD	60A	• X51B Fuse Block - Instrument Panel Auxiliary (LM2)
F11	—	F11UD	—	—