


Headlining Trim Panel Replacement (Regular Cab)

Caution: If a vehicle is equipped with a head curtain inflator module ensure that the inflator module and tether are undamaged. If tether or curtain airbag are damaged in any way, they must be replaced.


Caution: Use care when working around the head curtain inflator module. Sharp tools may puncture the curtain airbag. If the head curtain inflator module is damaged in any way, it must be replaced.

Removal Procedure


1. Remove the front center seat. [Front Center Seat Removal and Installation](#)

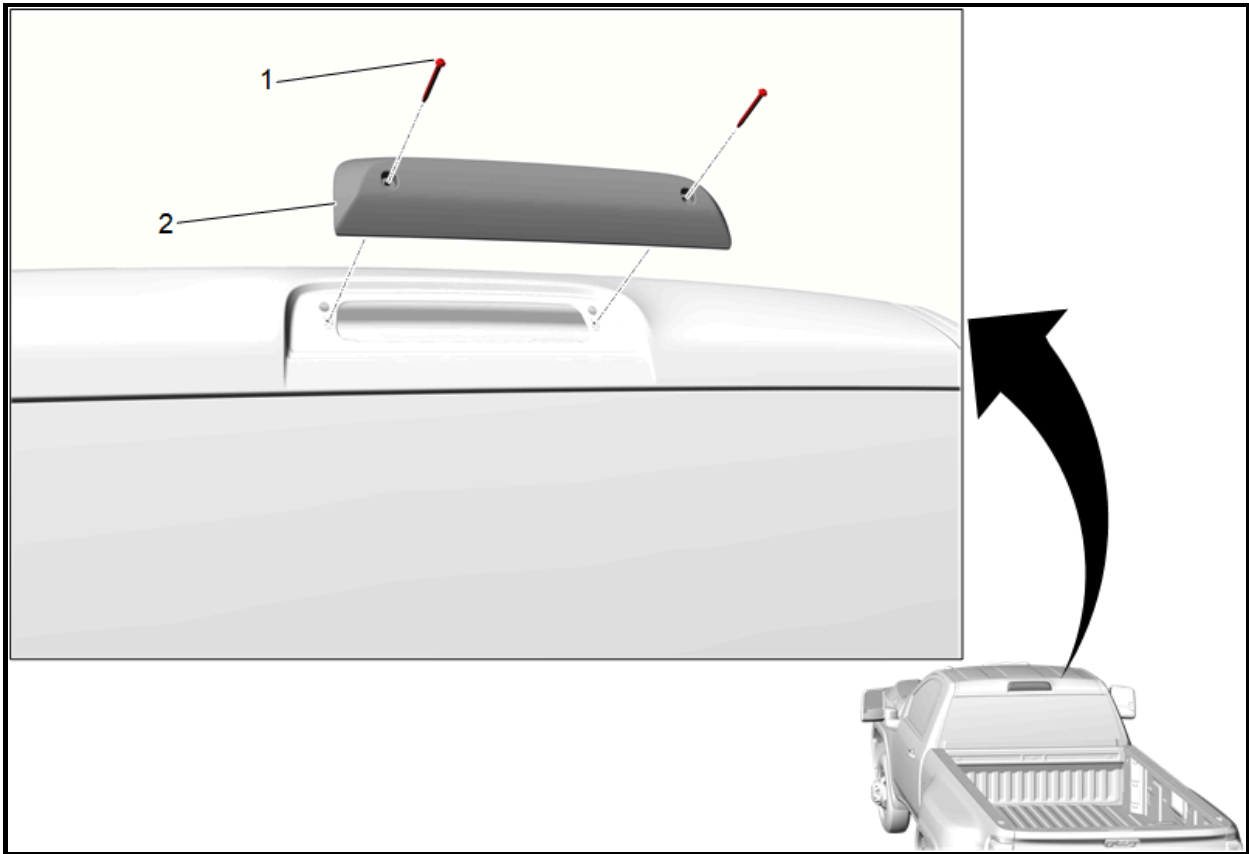

2. High Mount Stop Lamp Bracket Bolt (1) » Remove [2x]
3. High Mount Stop and Cargo Lamp (2) » Remove
4. Disconnect the electrical connector.

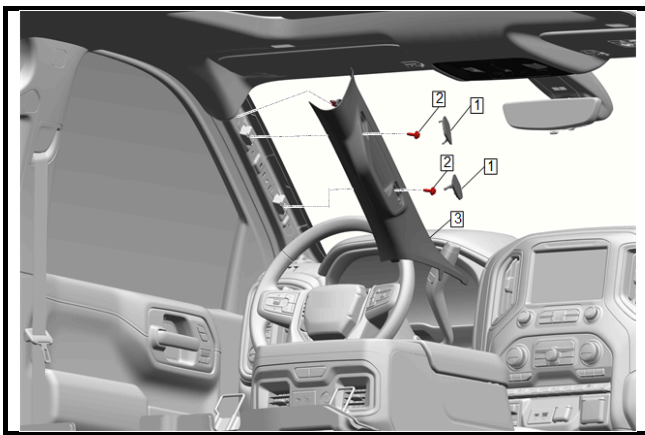


5. Use a small flat - bladed tool to open the upper and lower assist handle covers (1) to access the bolts (2).
6. Windshield Pillar Assist Handle Cover (1) » Remove [2x]
7. Windshield Pillar Assist Handle Bolt (2) » Remove [2x]
8. Pull inward at the top to disengage upper attachment clip.
9. Pull upward to disengage from the instrument panel.
10. Windshield Garnish Molding (3) » Remove [2x]
11. Disconnect the electrical connectors and release the wiring harness retainers as necessary.

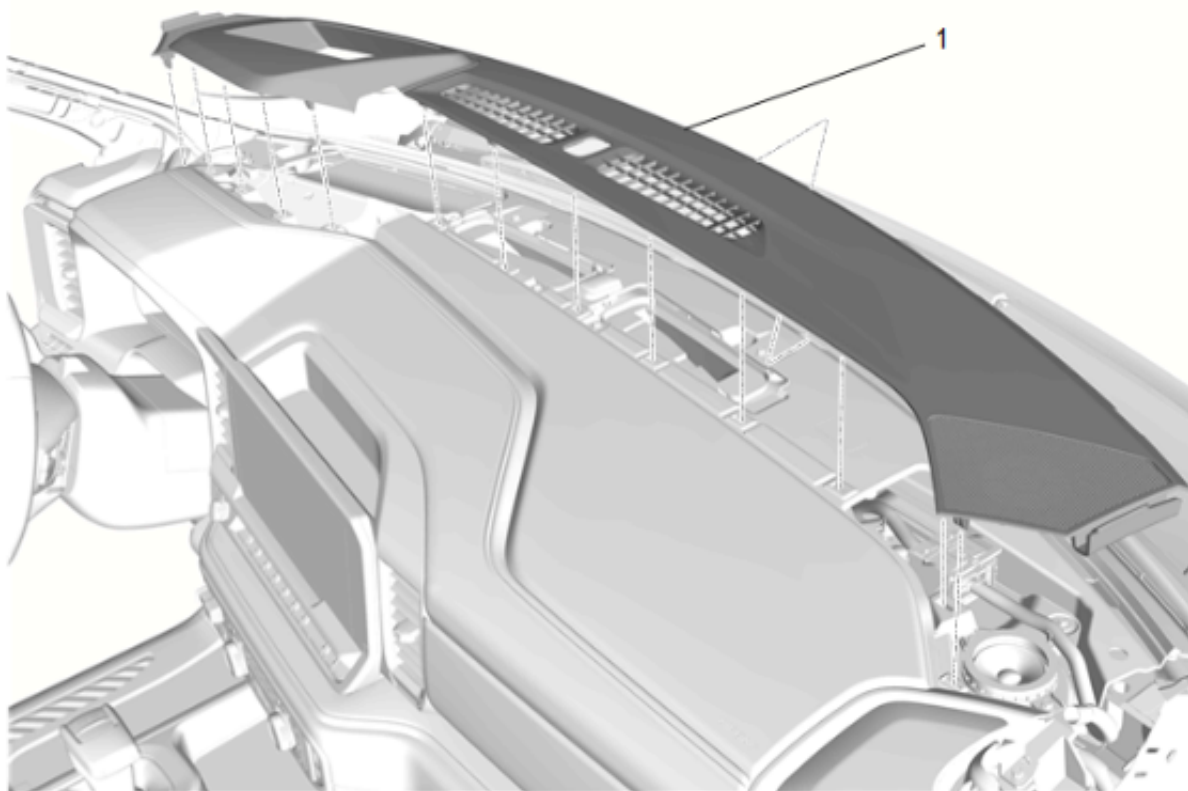


12. Using a flat-bladed plastic trim tool, release the retaining clips.
13. { If equipped } Disconnect the electrical connector.


14. Instrument Panel Extension (1) » Remove

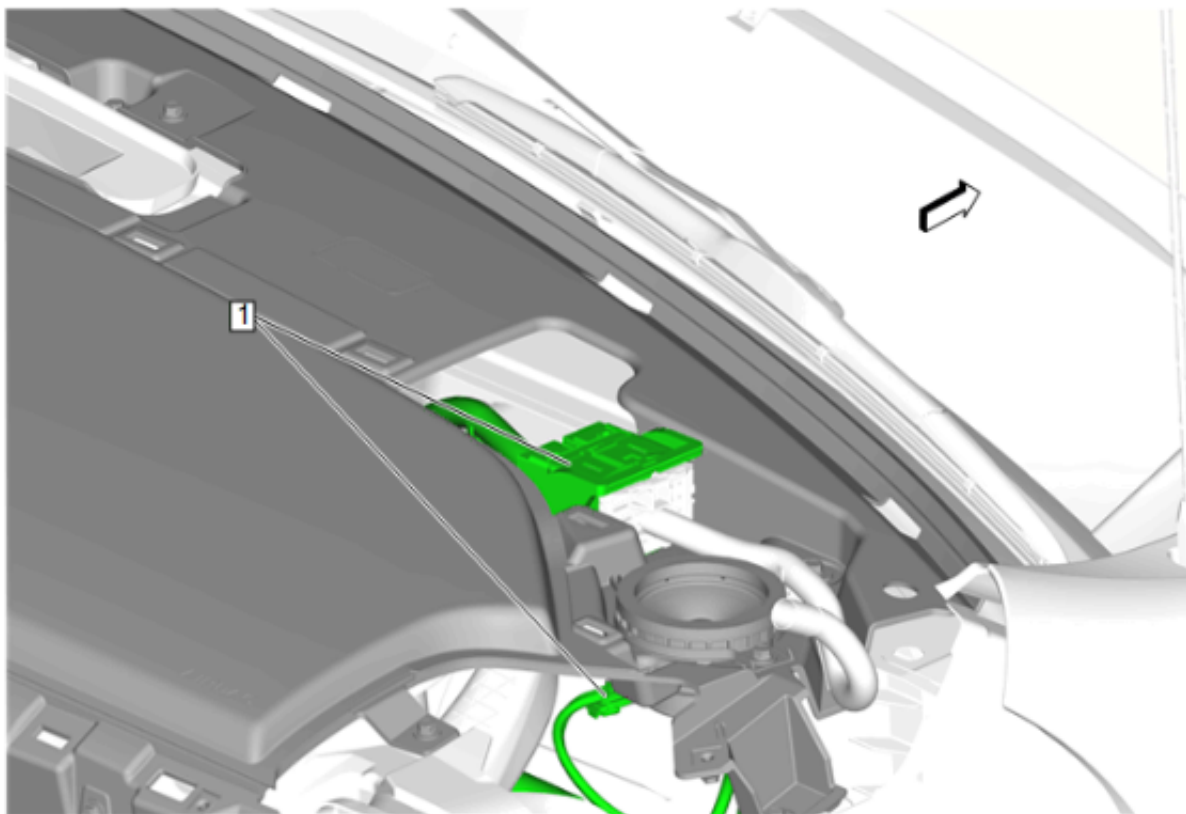


15. Disconnect the electrical connectors and reposition the instrument panel wiring harness (1) as necessary.

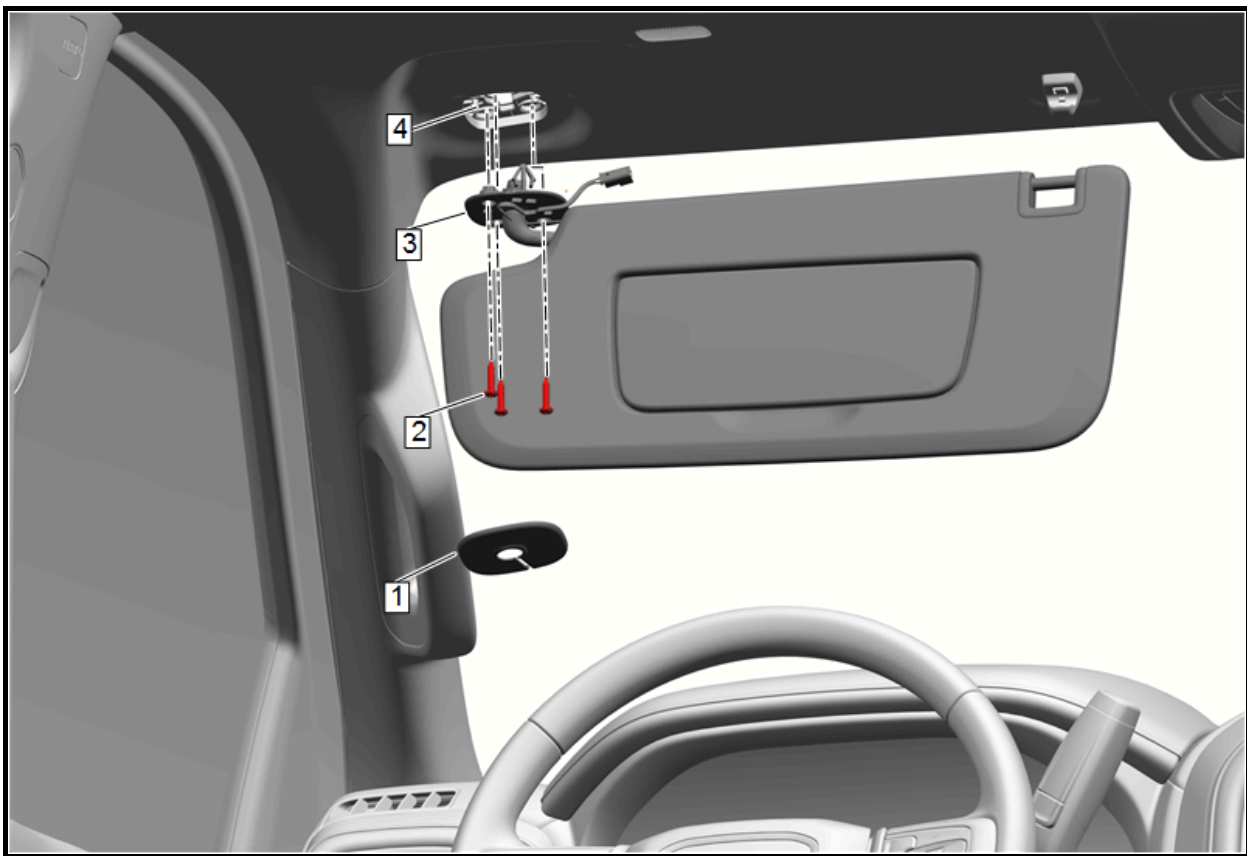


16. Sunshade Retainer Bolt Cover (1) » Remove [2x]
17. Sunshade Bolt (2) » Remove [6x]
18. Squeeze the tabs at the base of the sunshade (3) to detach it from the roof panel and allow the headliner with the sunshade (3) attached to be lowered.
19. Disconnect the electrical connector.
20. Release the retainer (4) attaching the sunshade (3) to the headlining trim panel.
21. Sunshade (3) » Remove [2x]

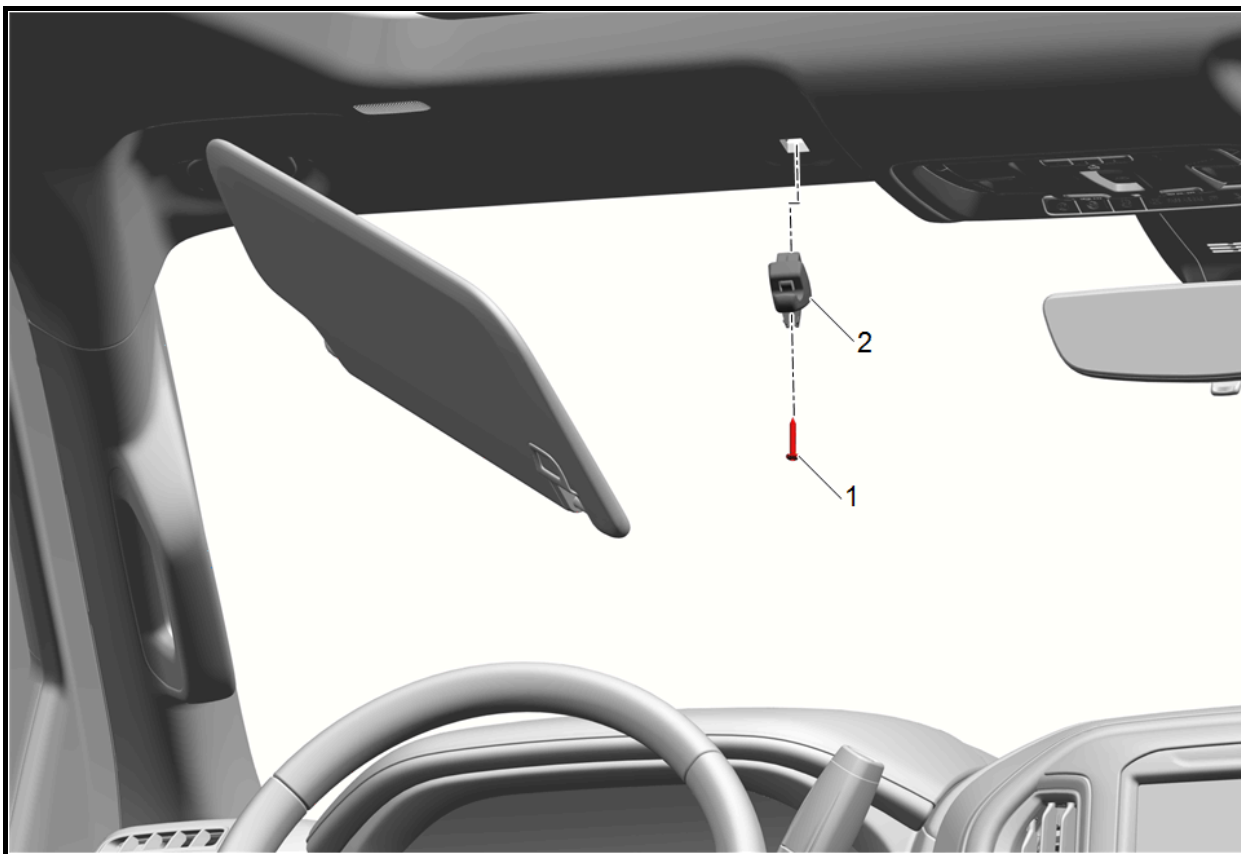

22. Open the sunshade support bolt access cover with an appropriate tool on both sides of the vehicle.
23. Sunshade Support Bolt (1) » Remove [2x]
24. Using the appropriate tool, release the metal sunshade support retainer on both sides of the vehicle.
25. Sunshade Support (2) » Remove [2x]

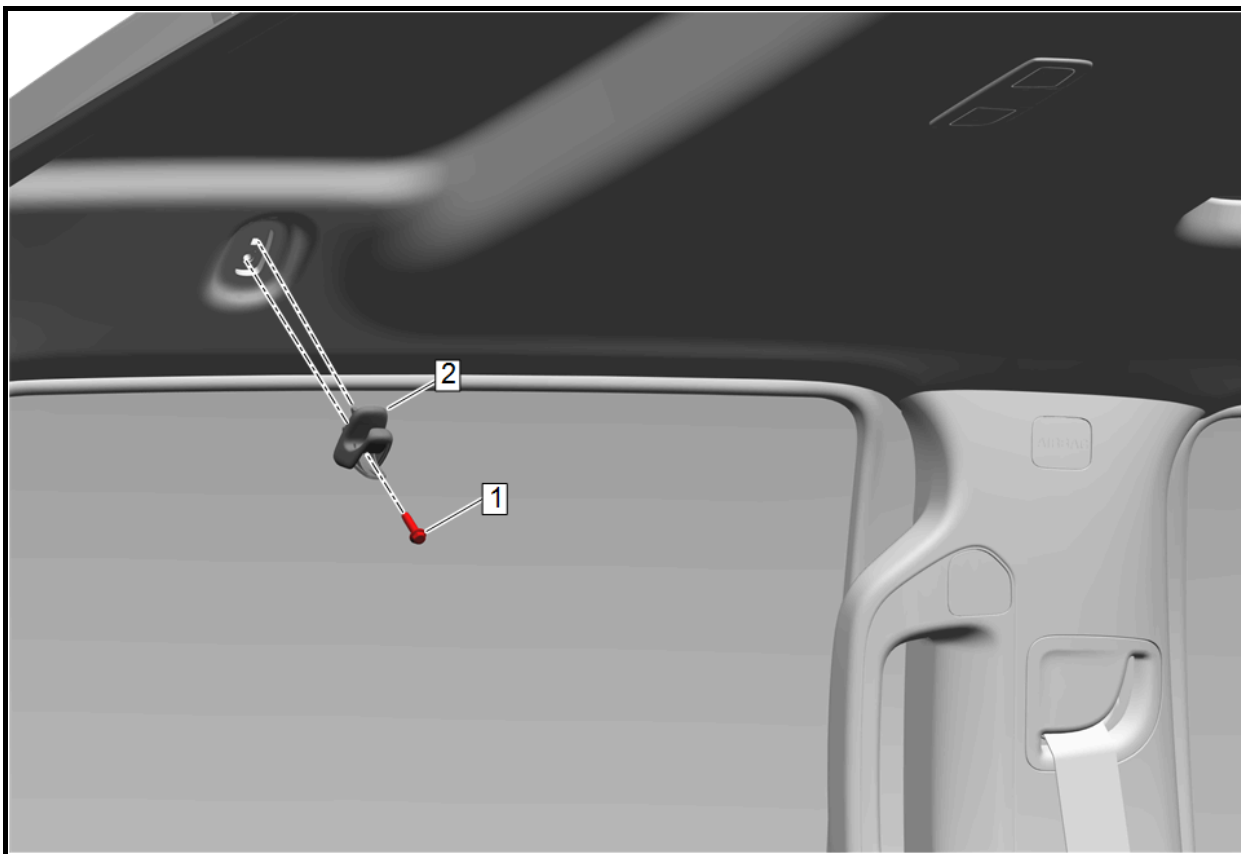


26. Using an appropriate trim tool, open the integral cover on the coat hook (2) to access the coat hook bolt (1) on both sides of the vehicle.
27. Coat Hook Bolt (1) » Remove [2x]
28. Coat Hook (2) » Remove [2x]

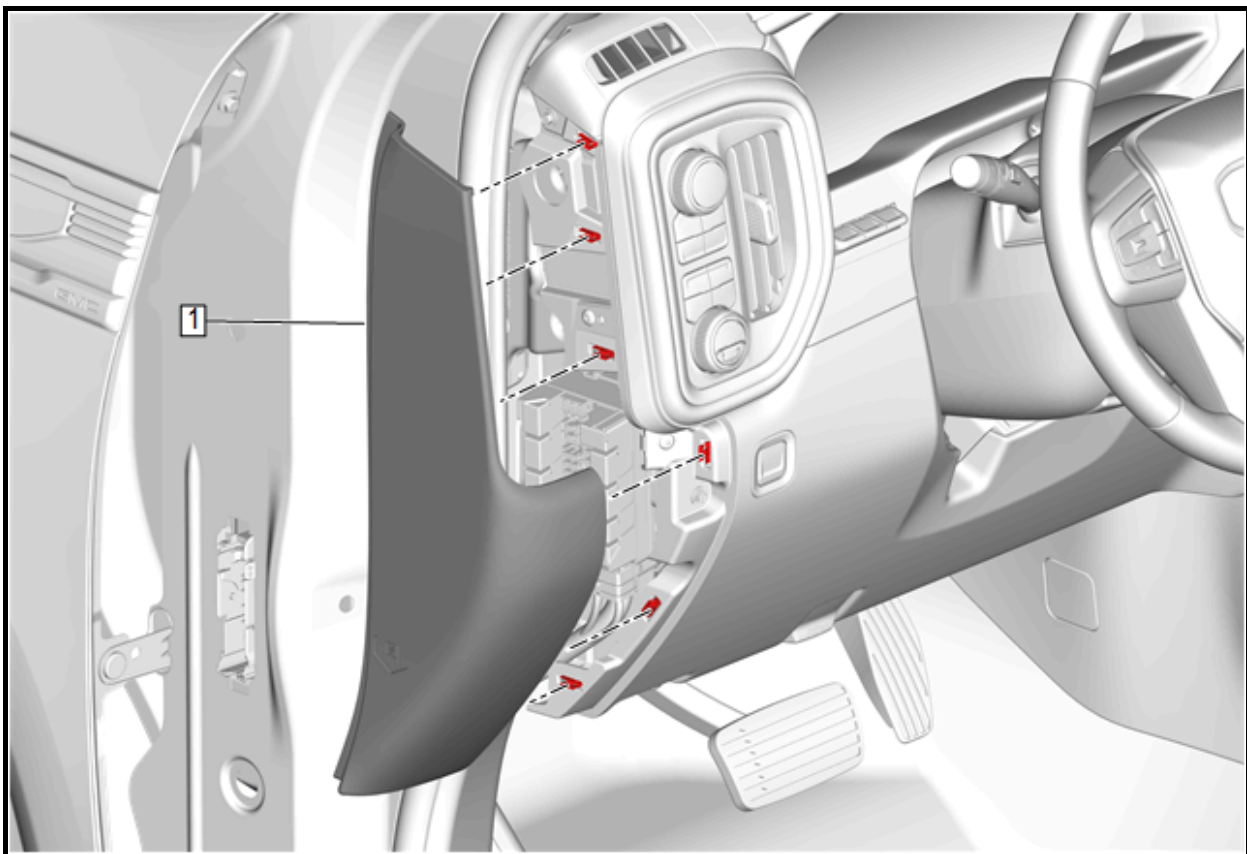


Note: Left side shown, right side similar.

29. Pull away a segment of the front side door weather-strip to clear the edge of the cover.
30. Using a flat-bladed plastic trim tool, release the retaining clips.
31. Start at the back and work your way inboard to release the tabs.
32. Instrument Panel Fuse Block Access Hole Cover - Right Side (1) » Remove

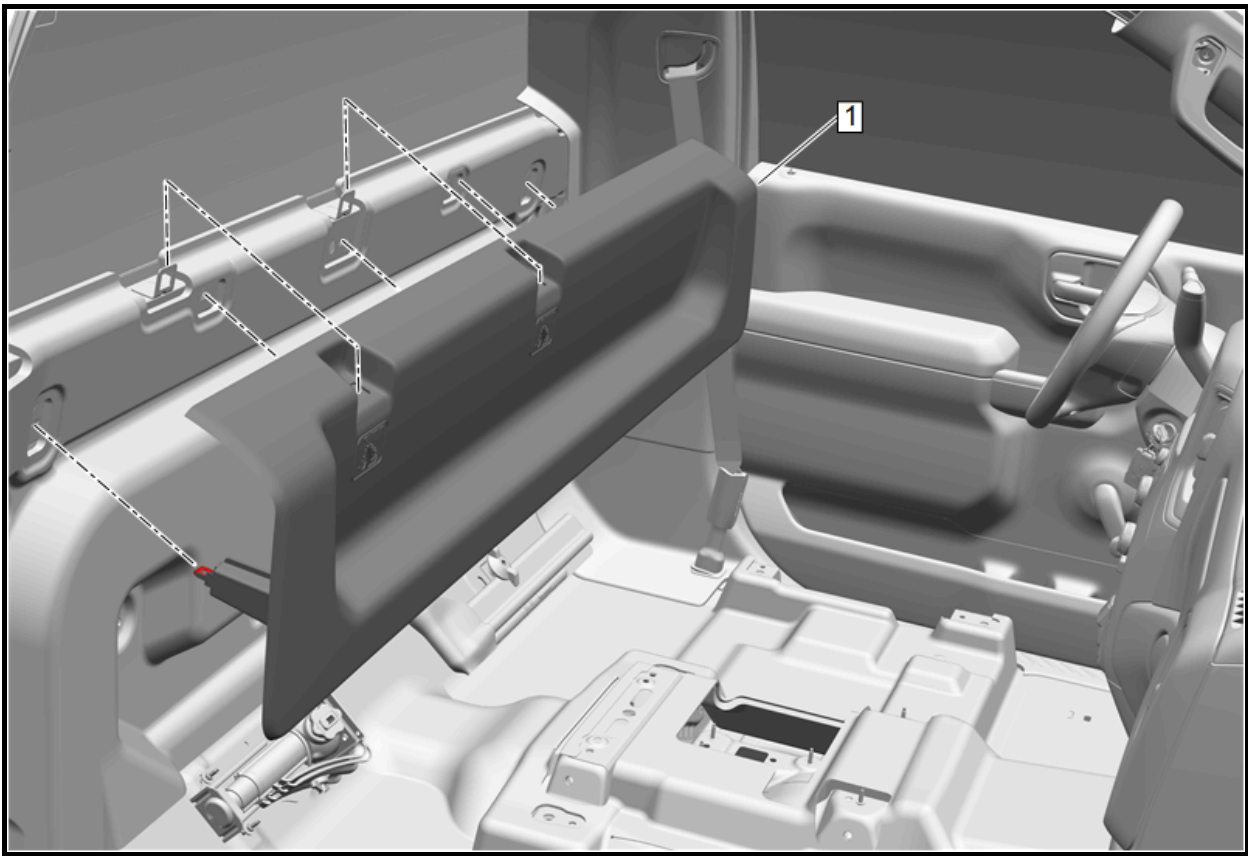


33. Carefully pull the rear window lower garnish molding (1) forward around all edges then the middle of the part to disengage the clips from the sheet metal.
34. After all integral clips are disengaged, lift up and forward to clear the 2 rear end panel brackets that the rear window lower garnish molding (1) sits over.

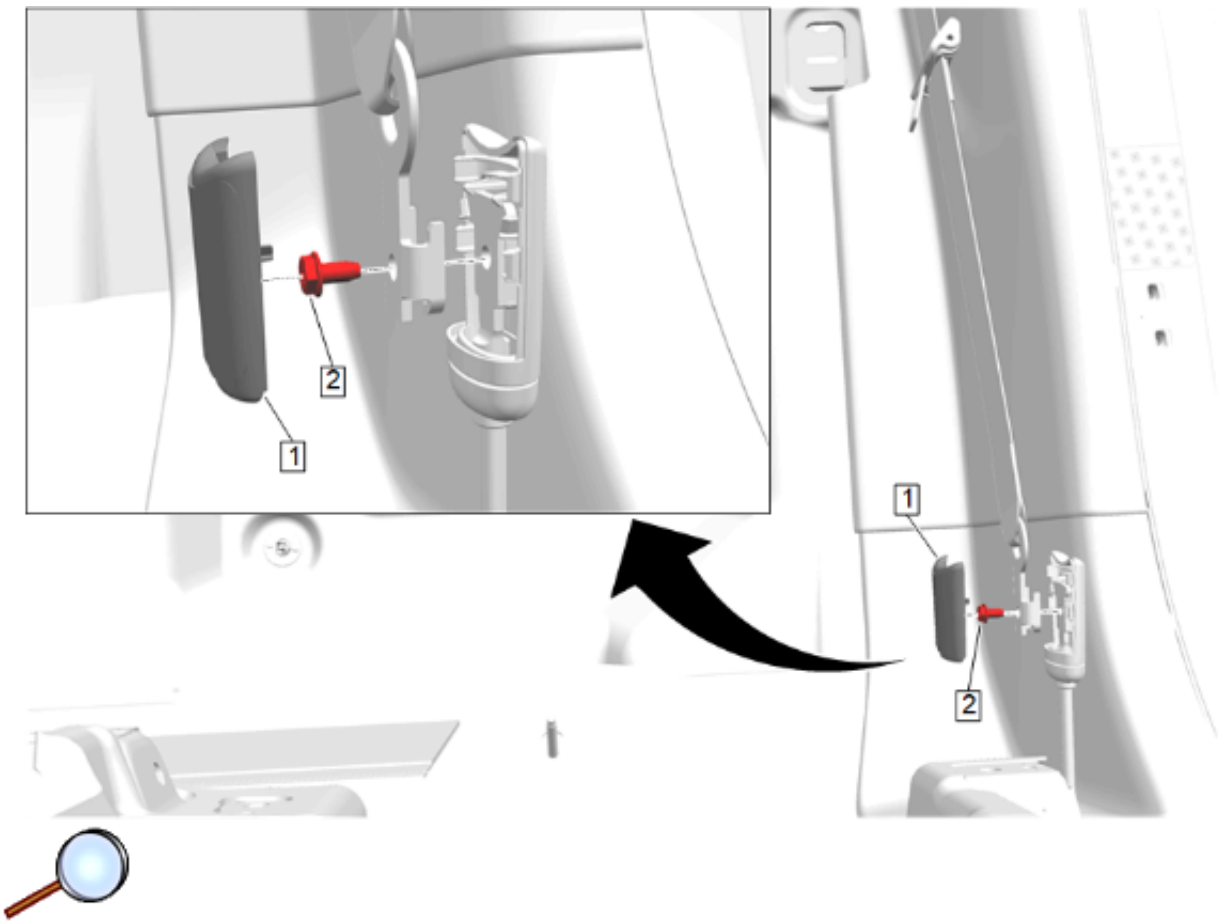


35. Front Seat Belt Anchor Plate Tensioner Cover (1) » Remove [2x]

36. Front Seat Belt Anchor Plate Tensioner Bolt (2) » Remove [2x]

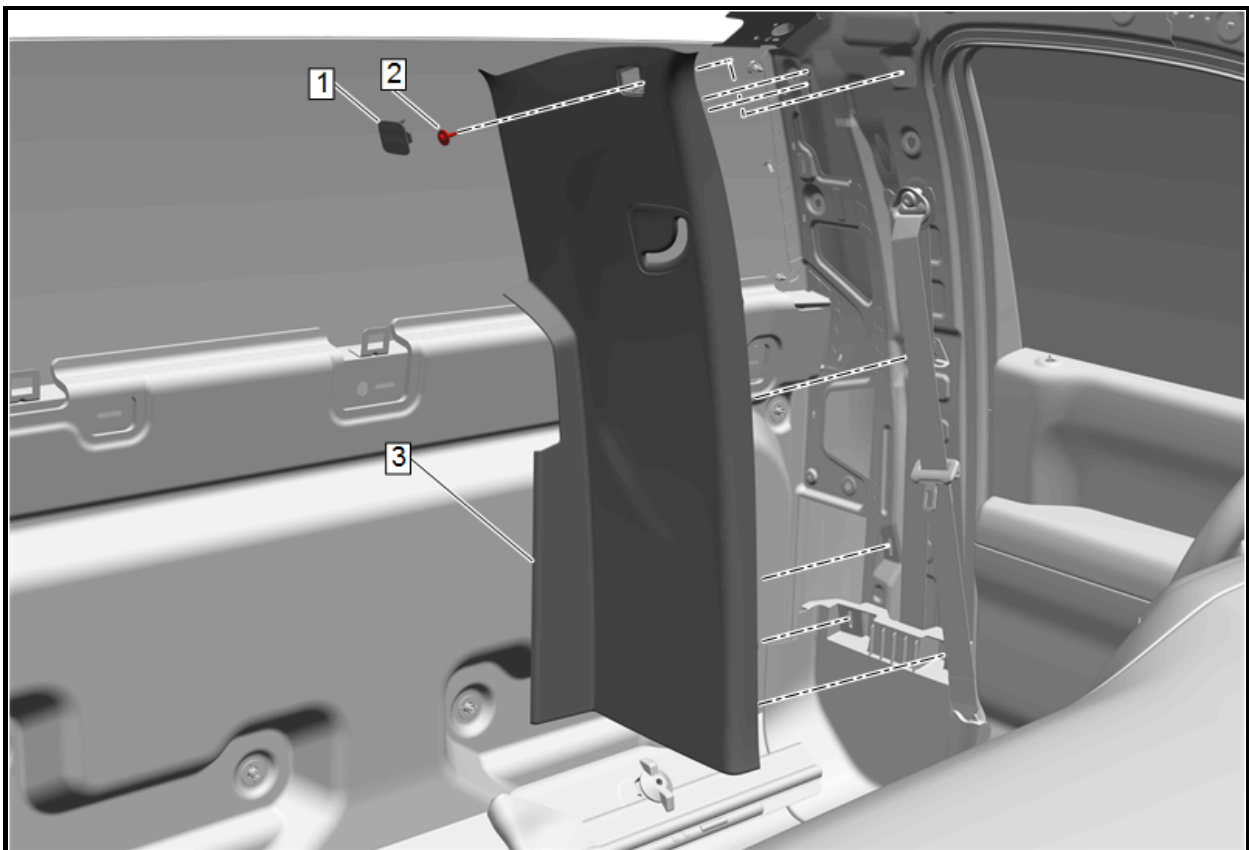




37. Use a small flat bladed tool to open the trim panel bolt cap (1) on both sides of the vehicle.
38. Body Lock Pillar Garnish Molding Bolt (2) » Remove [2x]
39. Starting at the top and working down with a trim tool, grasp the body lock pillar garnish molding (3) and gently pull the panel away from the body to release the retainers on both sides of the vehicle.
40. Body Lock Pillar Garnish Molding (3) » Remove [2x]
41. Route the seat belt webbing through the body lock pillar garnish molding (3) on both sides of the vehicle.

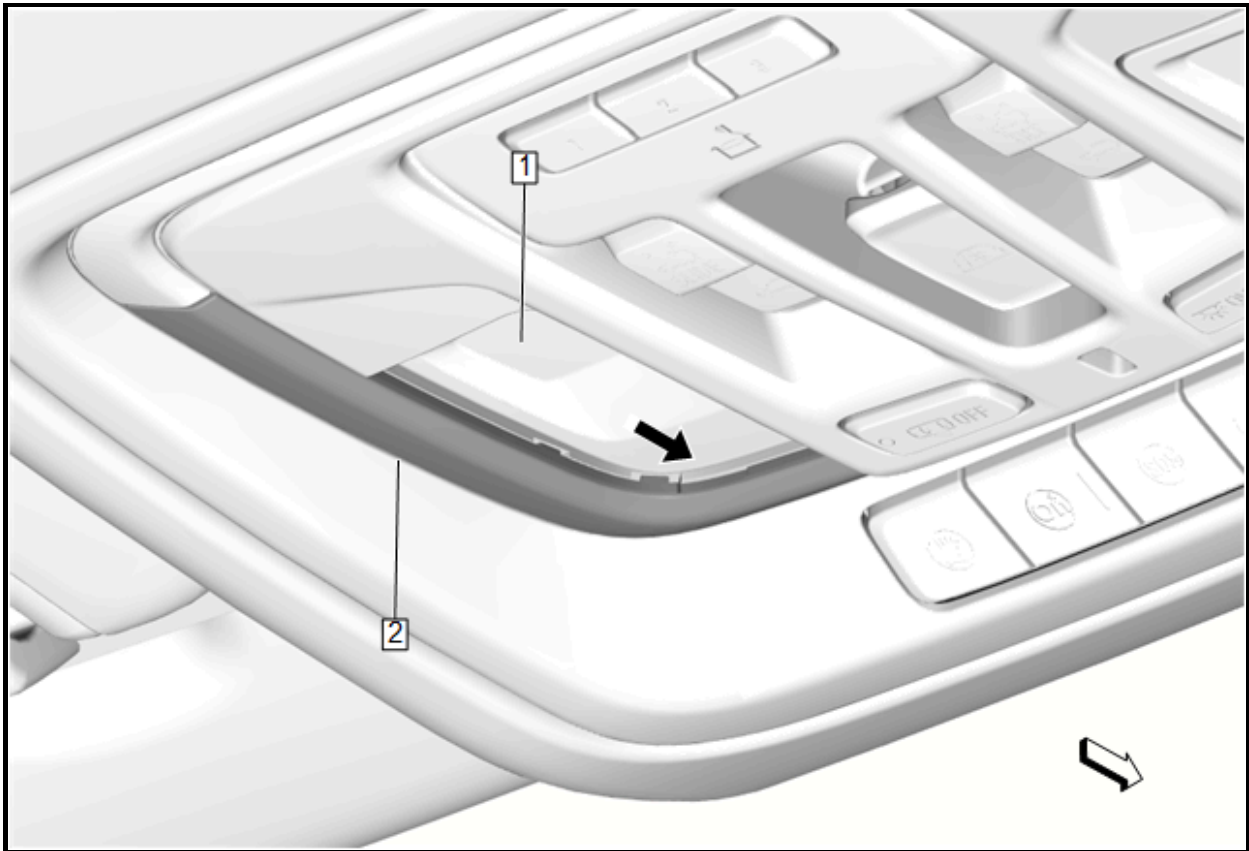


42. Push in the lamp lens (1) to access the notches on the roof console lamp trim plate (2).
43. Using a plastic trim tool and working your way rearward, release the retainers of the roof console lamp trim plate (2).

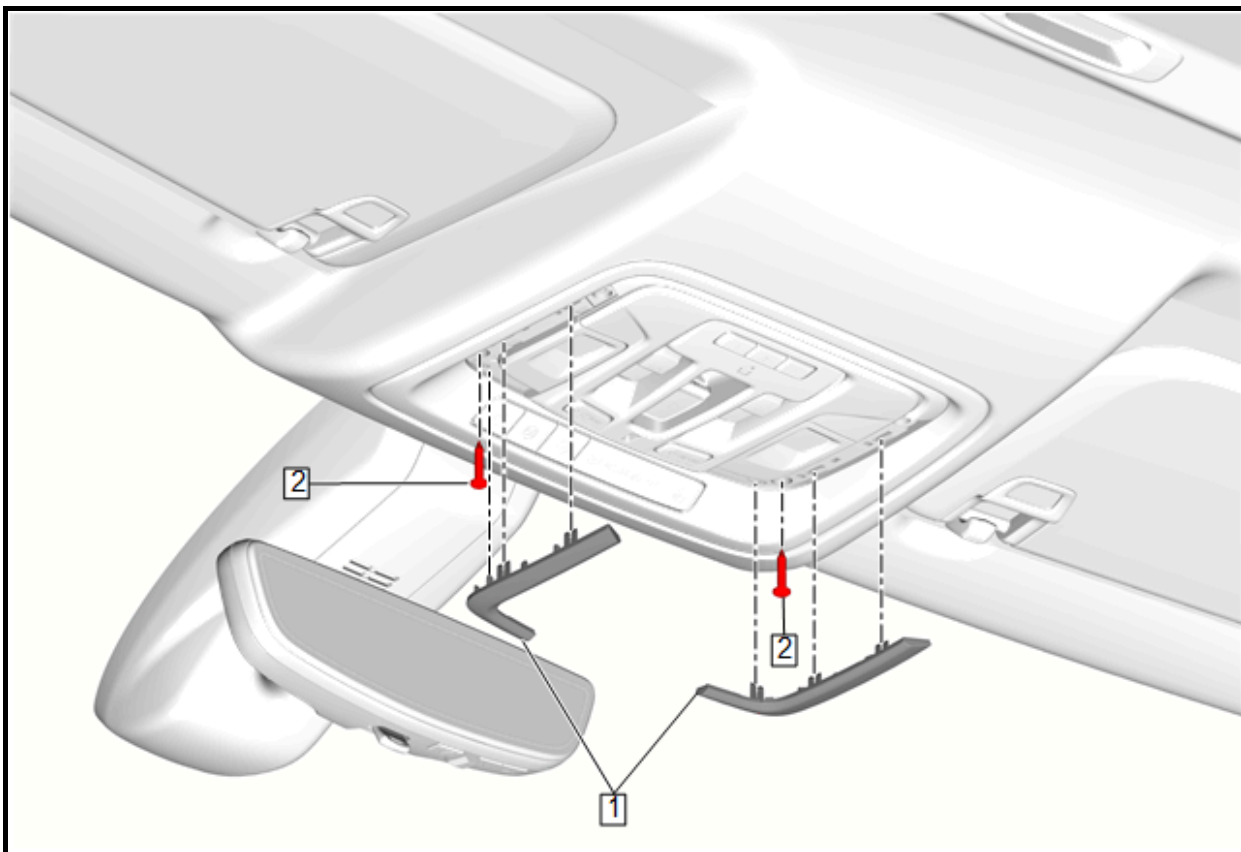

44. Roof Console Lamp Trim Plate (1) » Remove [2x]


Note: Note the location of the fastener opening. The fasteners are being misaligned and not retaining the forward roof console clips during installation.

45. Roof Console Bolt (2) » Remove [2x]

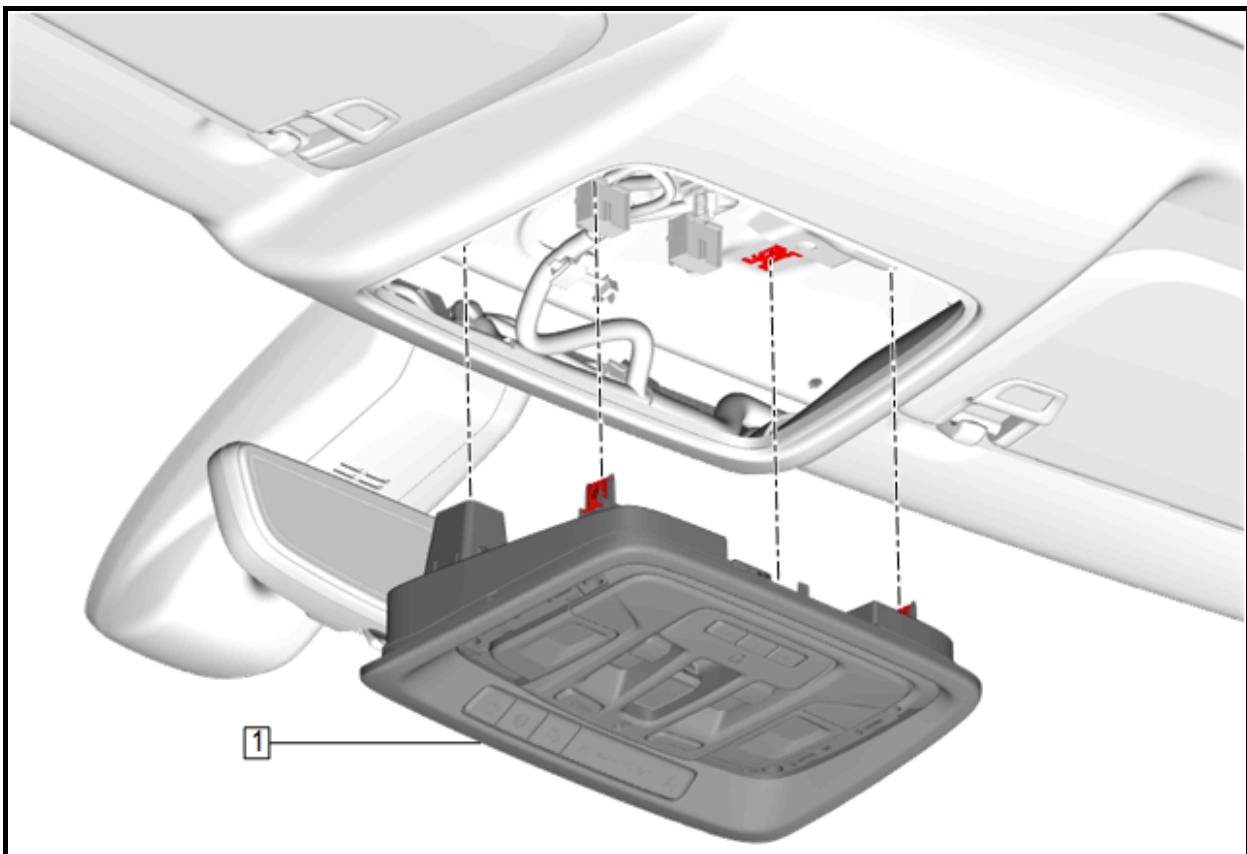


46. Roof Console (1) » Remove

47. Disconnect the electrical connectors.

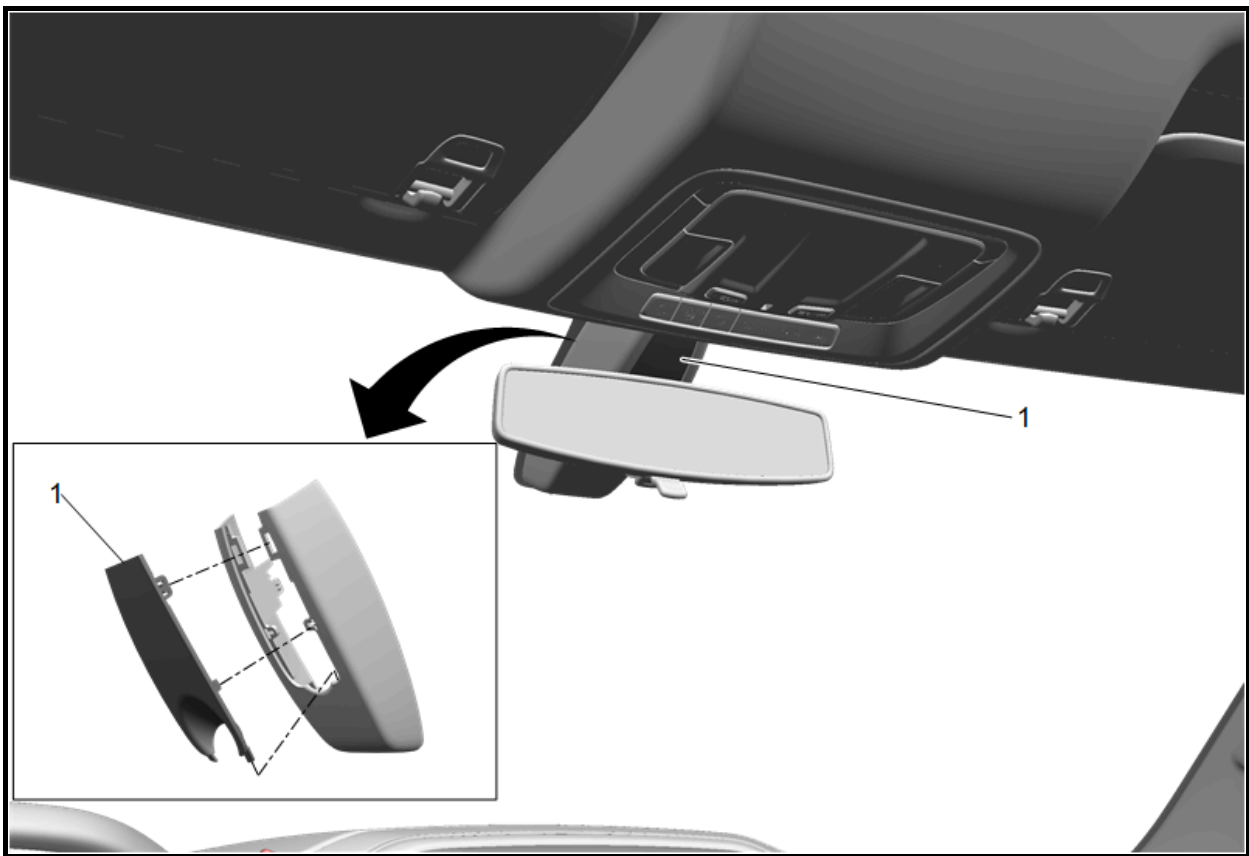


Warning: While operating, electrical control modules can produce heat and become hotter than their surroundings. To prevent burns allow sufficient time for the module to cool before removal.

48. Using a plastic trim tool, carefully pry downward on the windshield multifunction sensor mount bracket cover insert (1) to release from the windshield multifunction sensor mount bracket cover.
49. Squeeze the tabs on the windshield multifunction sensor mount bracket cover insert (1) and pull apart from the windshield multifunction sensor mount bracket cover.
50. Windshield Multifunction Sensor Mount Bracket Cover Insert (1) » Remove

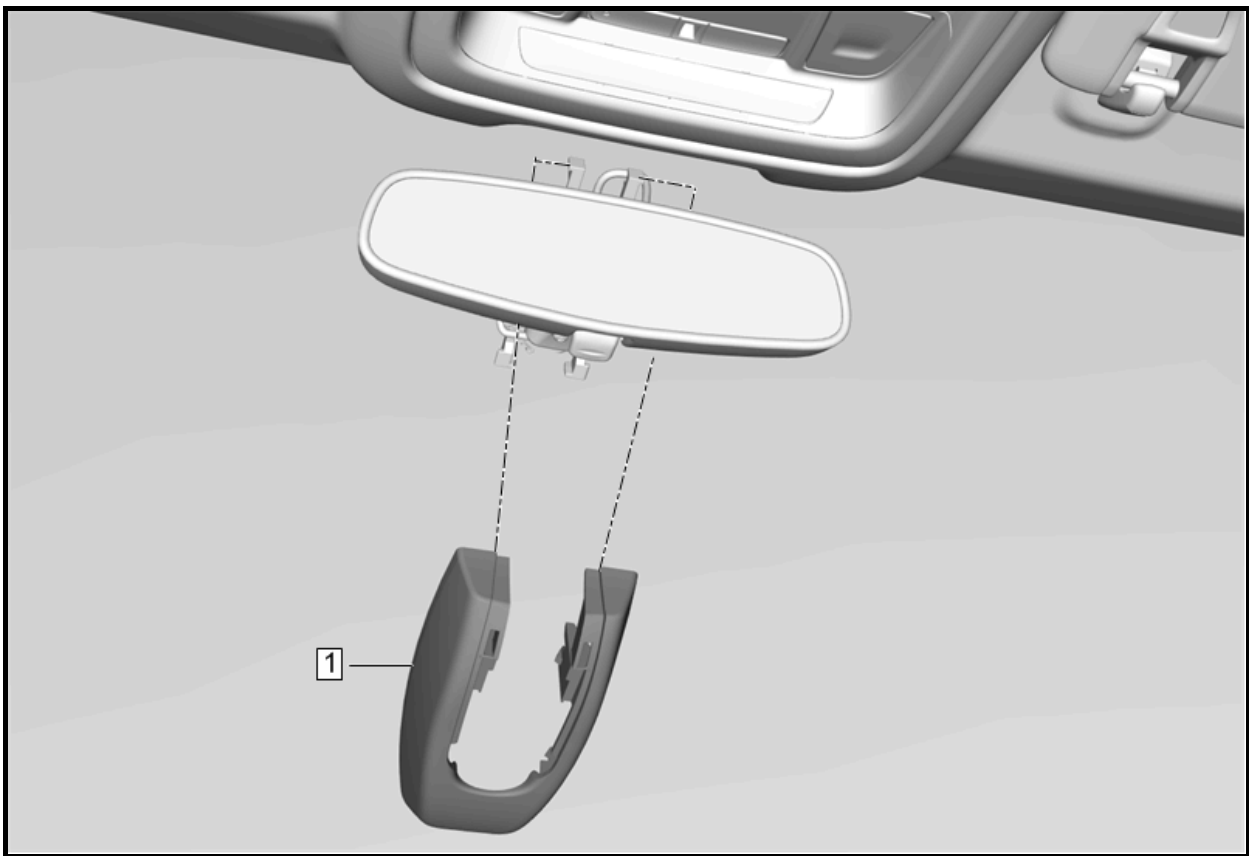

51. Using a plastic trim tool, loosen the windshield multifunction sensor mount bracket cover (1) from the windshield multifunction sensor mount bracket and pull downward to remove.
52. Windshield Multifunction Sensor Mount Bracket Cover (1) » Remove

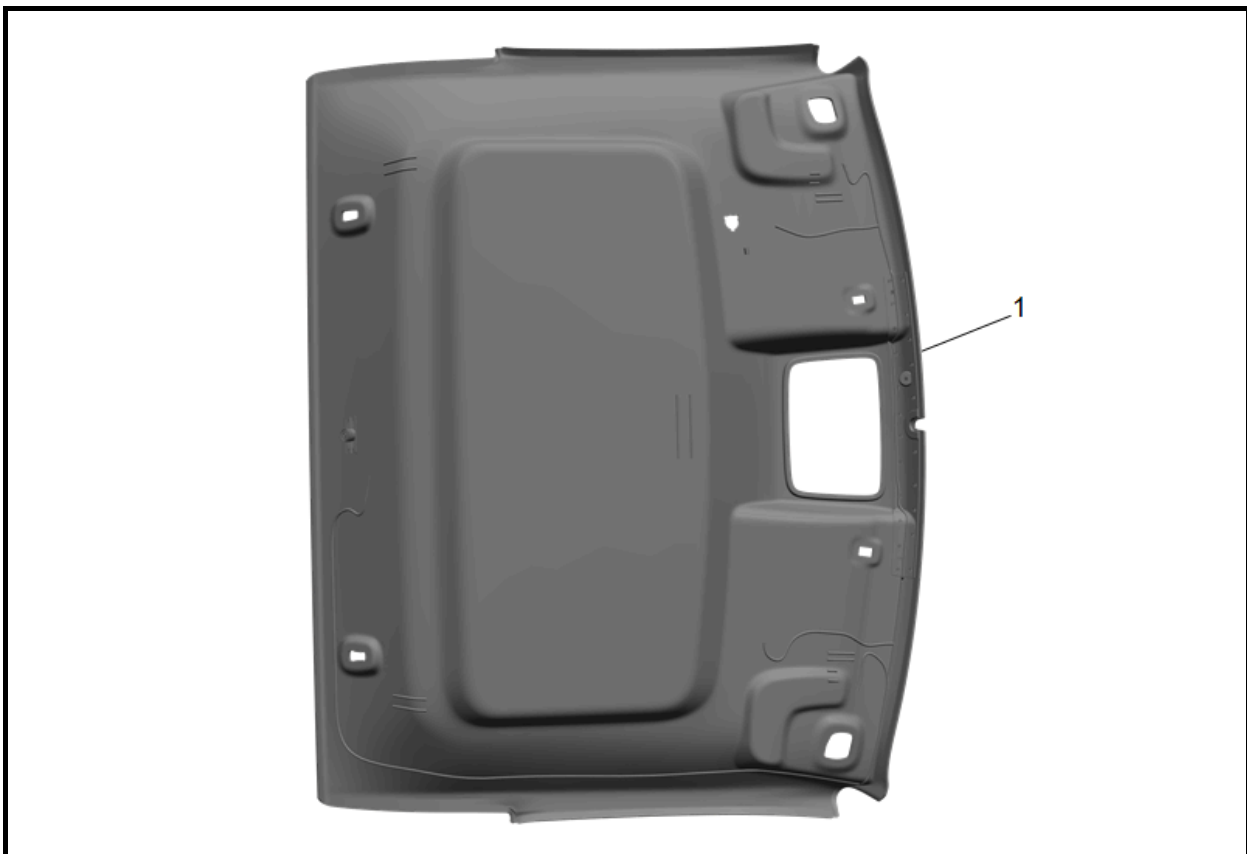


Warning: Do not attempt to repair or alter the head impact energy-absorbing material glued to the headliner or to the garnish trims. If the material is damaged, replace the headliner and/or the garnish trim. Failure to do so could result in personal injury.


Note: Prior to removal, note the routing of the wire harness to aid in reassembly and to ensure proper installation.

53. Drop the headlining trim panel (1) down.
 54. Disconnect the electrical connectors.
 55. With the aid of an assistant, remove the headlining trim panel (1) from the vehicle through the passenger side door opening.
 56. Transfer components as necessary.
 57. If transferring or replacing the wiring harness.
 - Take note of the wiring harness locations and measure the harness lead length prior to removing. Mark harness routing locations on new headlining trim panel (1) prior to harness removal.
- Note:** Use a camera to take pictures and use a pencil to mark the new headlining trim panel (1) .
- Use fiber or plastic trim tool to assist in removing the wiring harness from the headlining trim panel (1), taking care not to damage the harness.
 - Remove excess glue and material from the wiring harness and re-tape areas where the tape was removed or damaged.


Installation Procedure

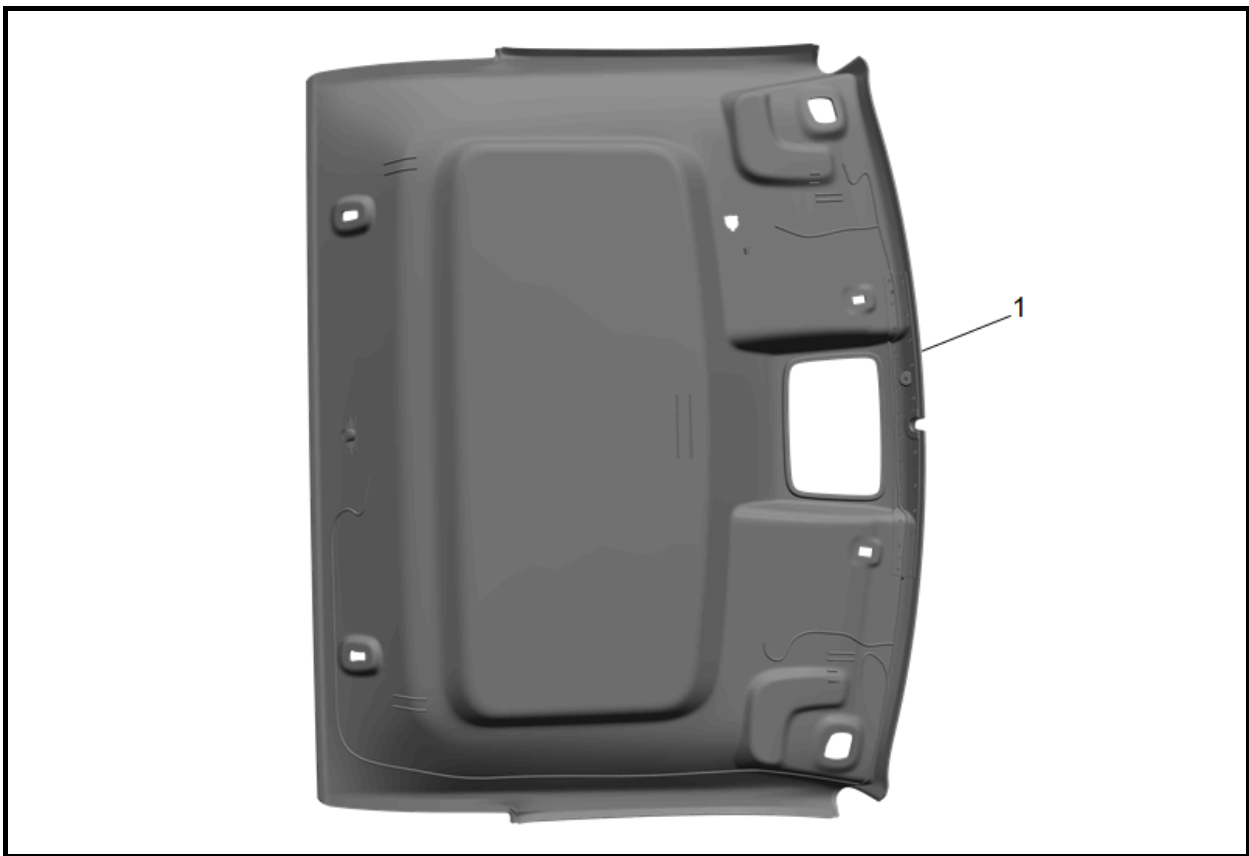


1. Install the headliner wiring harness, if necessary.
 - Lay the wiring harness on the new headlining trim panel (1) to confirm correct routing and ensure harness leads are proper length for mating connections prior to gluing.
 - Use hot melt adhesive to install the wiring harness. [Adhesives, Fluids, Lubricants, and Sealers](#)
 - Apply insulator tape over glued locations to prevent squeaks and rattles as needed.
2. With the aid of an assistant, position the headlining trim panel (1) into the vehicle through the passenger side door opening.
3. Connect the electrical connectors.
4. Tape any unused connectors to the headlining with a high adhesive tape.

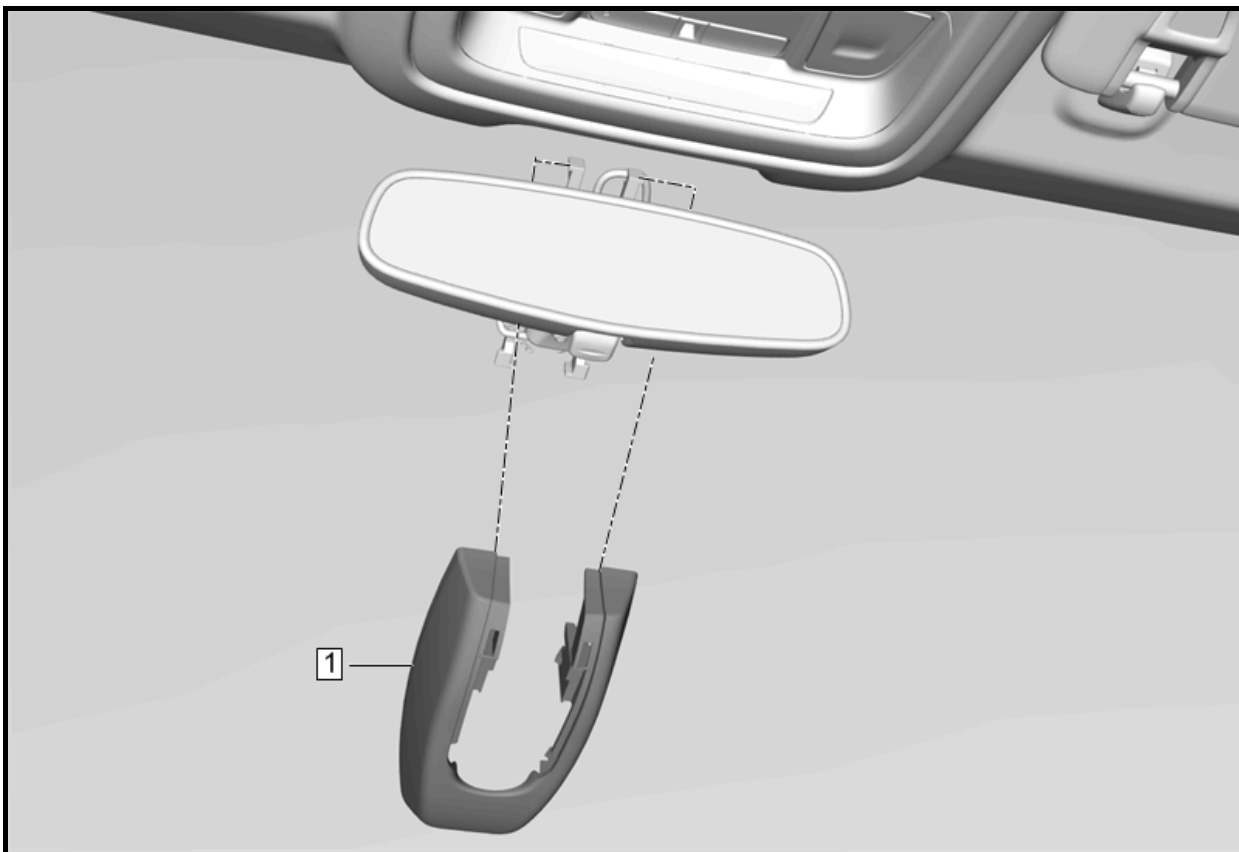

5. Windshield Multifunction Sensor Mount Bracket Cover (1) » Install
6. Connect the electrical connectors.

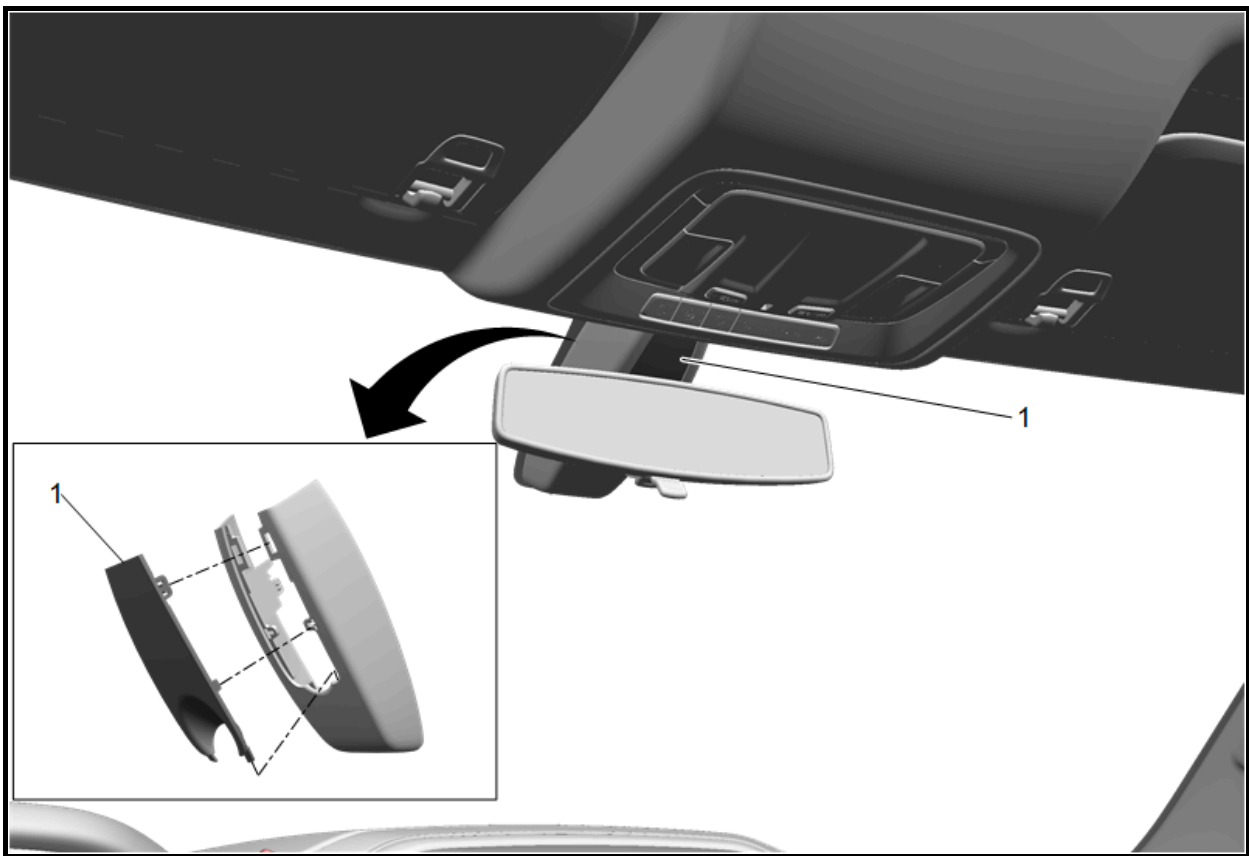


7. Windshield Multifunction Sensor Mount Bracket Cover Insert (1) » Install

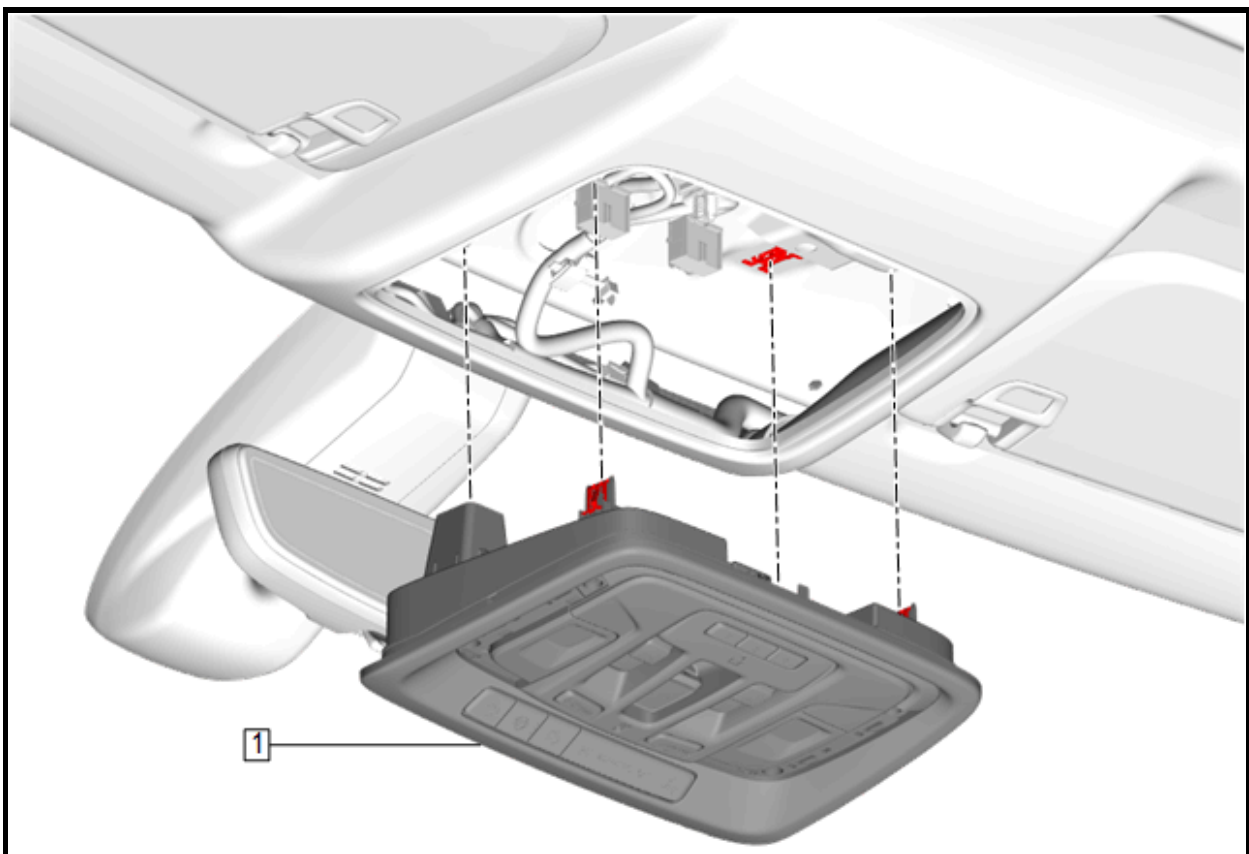



8. Connect the electrical connectors.

9. Roof Console (1) » Install

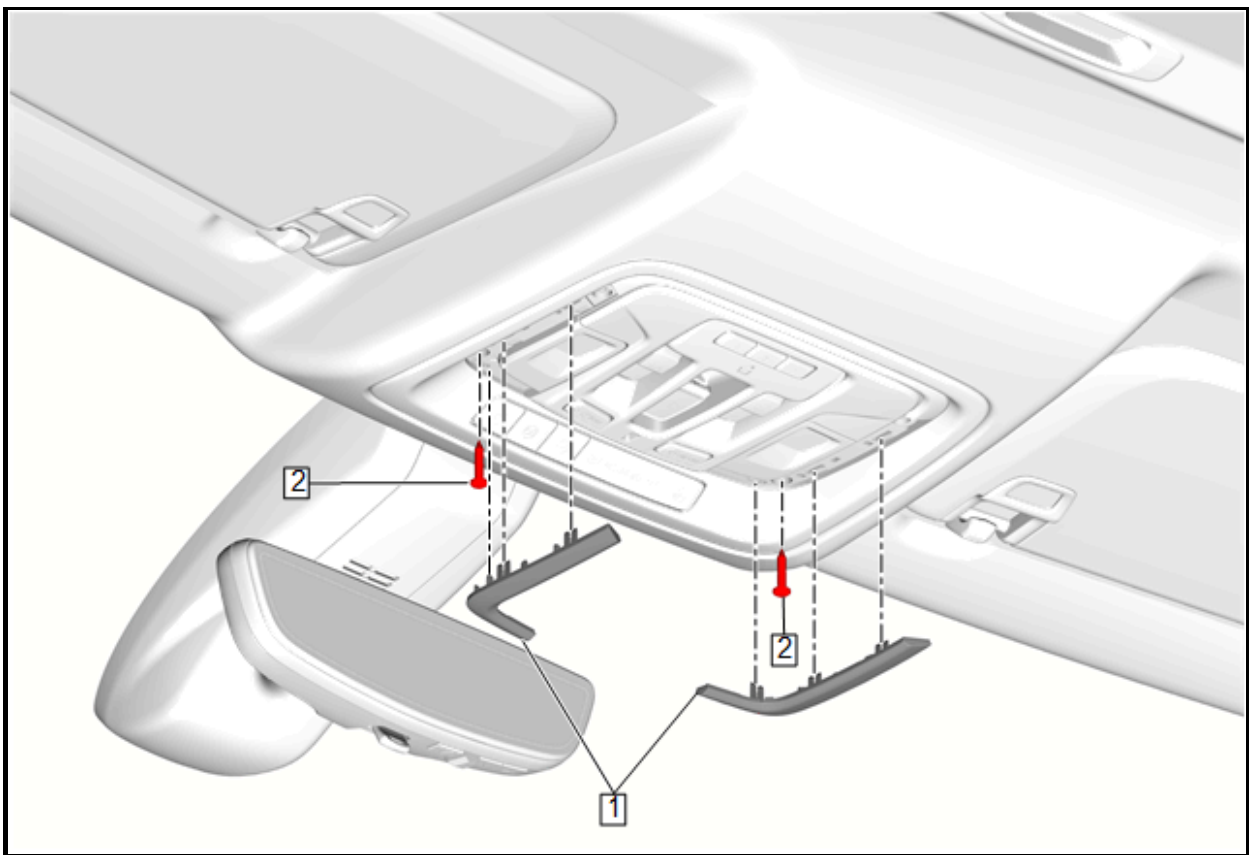


Caution: Refer to [Fastener Caution](#).


Note: Use a light to locate the fastener boss when installing the fasteners. Pull down on the forward end of the roof console to verify that the retention clips are secure.

10. Roof Console Bolt (2) » Install and tighten [2x] — [Fastener Specifications](#)


11. Roof Console Lamp Trim Plate (1) » Install [2x]

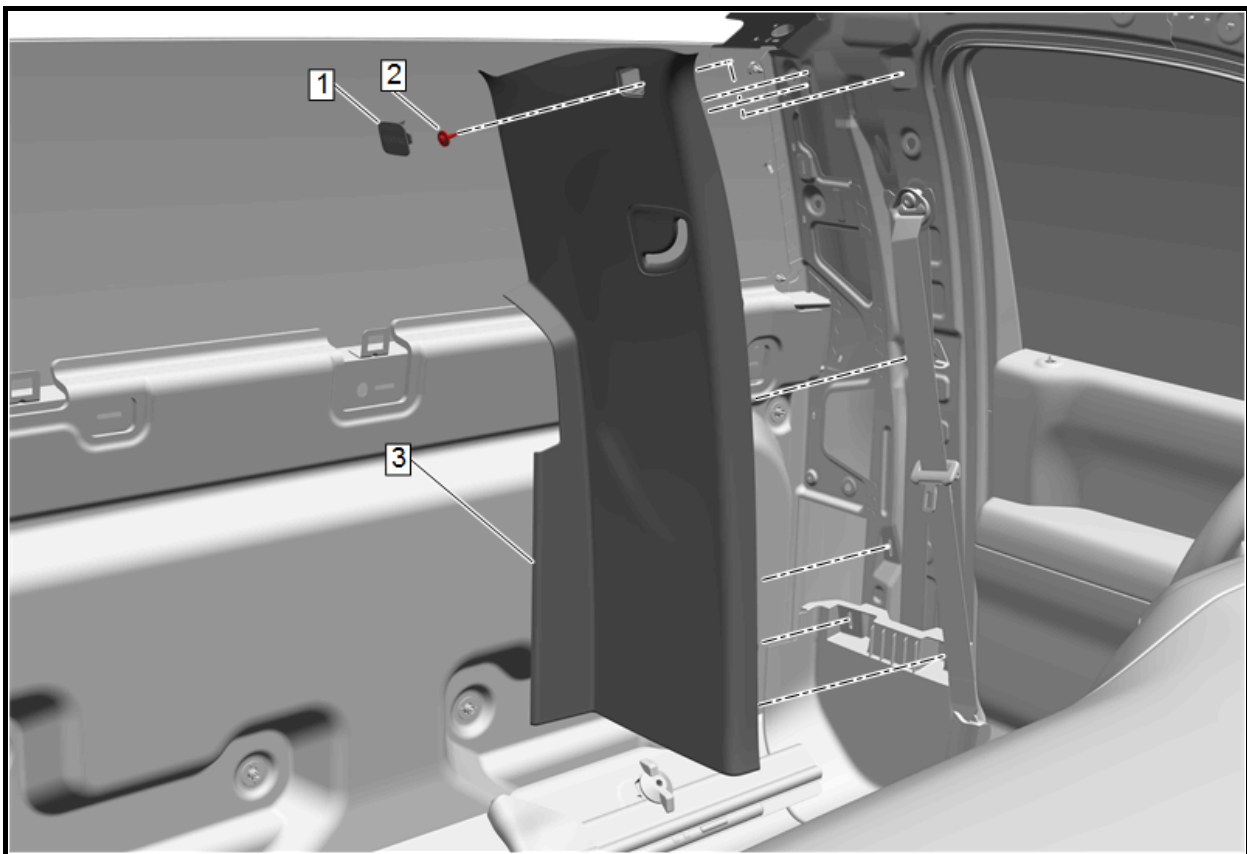


12. Route the seat belt webbing through the body lock pillar garnish molding (3) on both sides of the vehicle.
13. Body Lock Pillar Garnish Molding (3) » Install [2x]
14. Body Lock Pillar Garnish Molding Bolt (2) » Install and tighten [2x] — [Fastener Specifications](#)
15. Center Pillar Upper Trim Panel Bolt Cap (1) » » Install [2x]

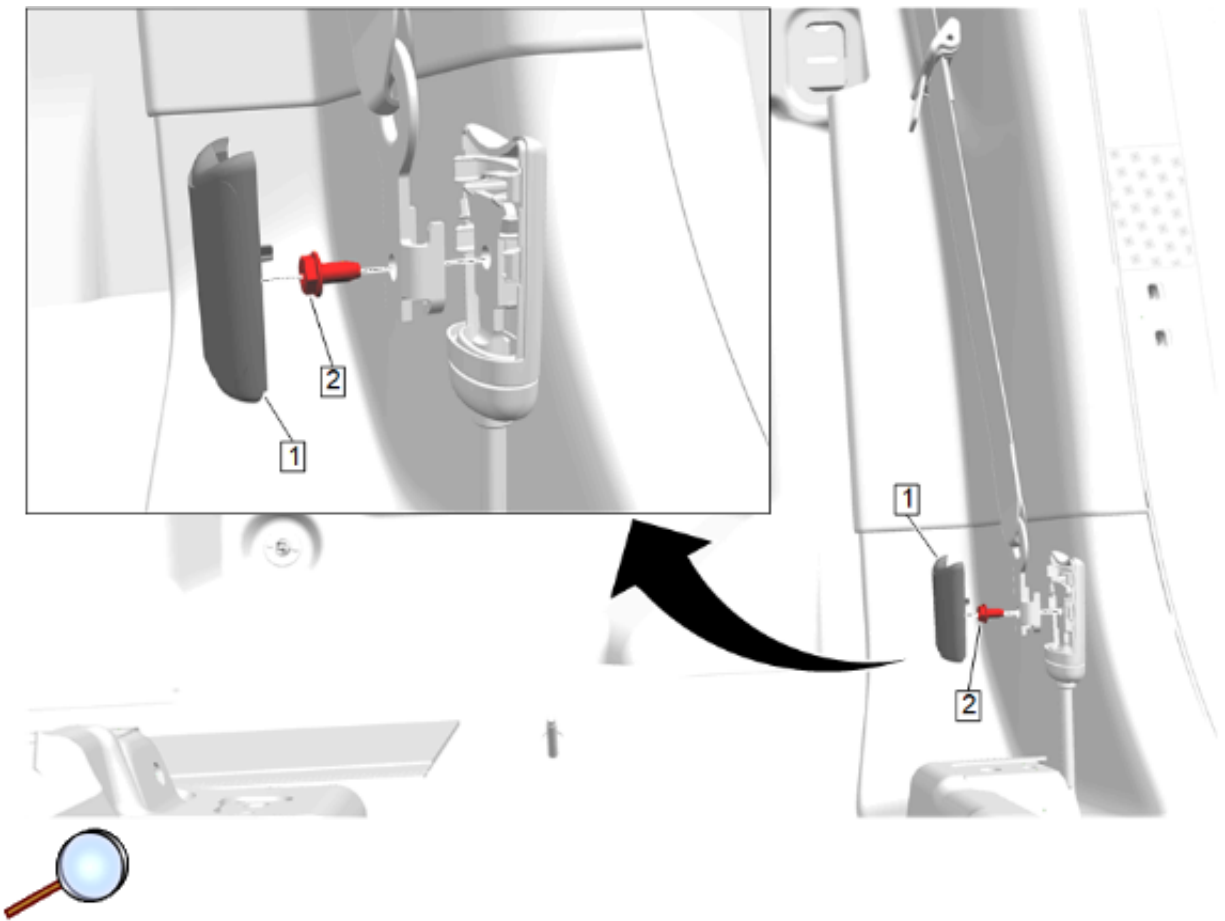

16. Front Seat Belt Anchor Plate Tensioner Bolt (2) » Install and tighten [2x] — [Fastener Specifications](#)
17. Front Seat Belt Anchor Plate Tensioner Cover (1) » Install [2x]

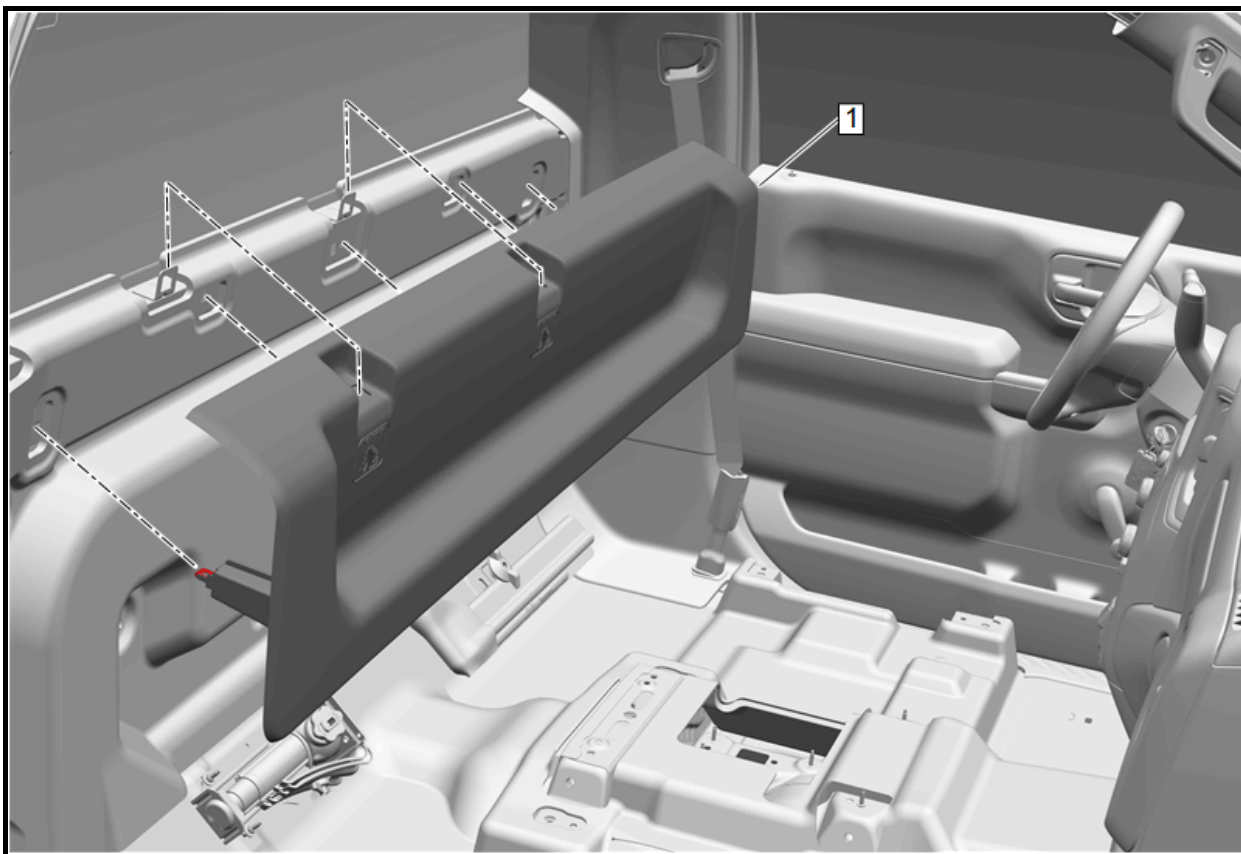


18. Rear Window Lower Garnish Molding (1) » Install

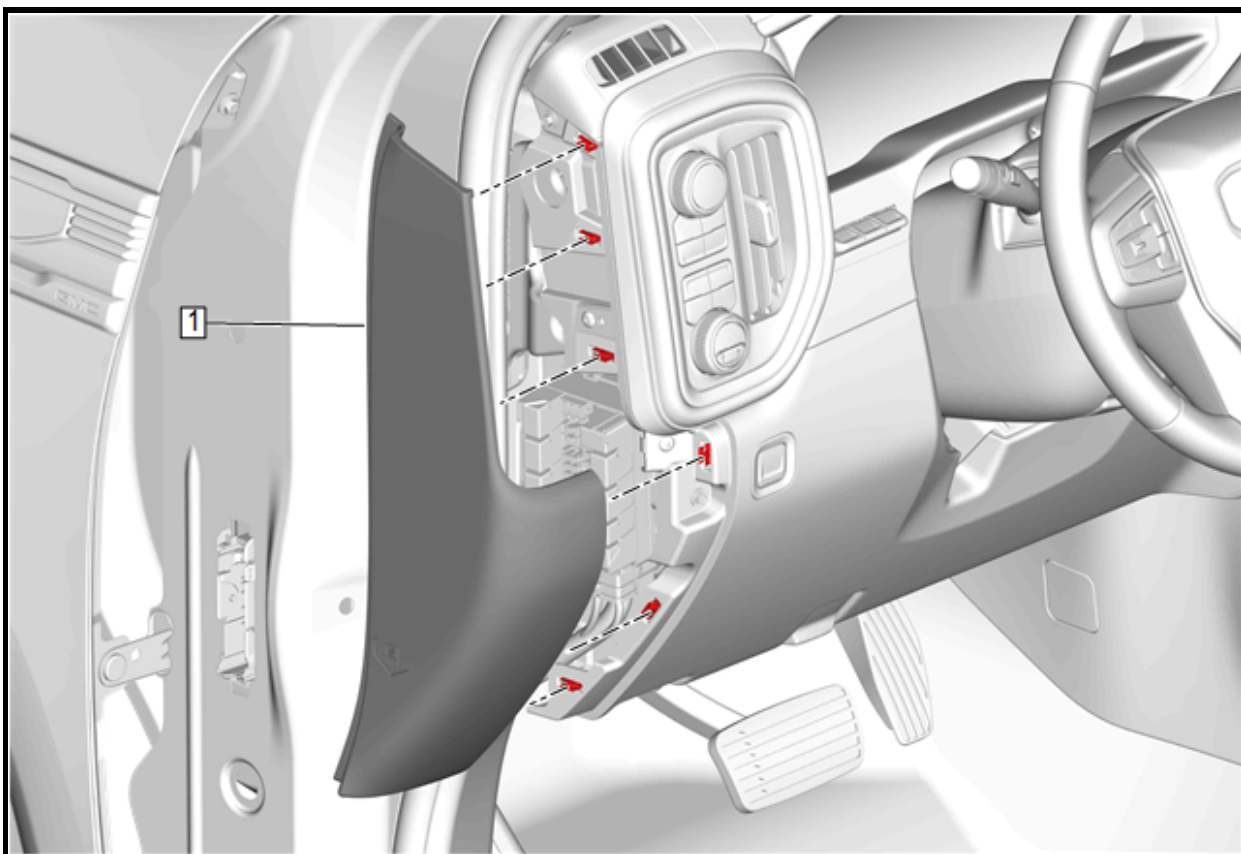




Note: Left side shown, right side similar.

19. Instrument Panel Fuse Block Access Hole Cover - Right Side (1) » Install
20. Replace the front side door weather-strip to cover the edge of the cover.

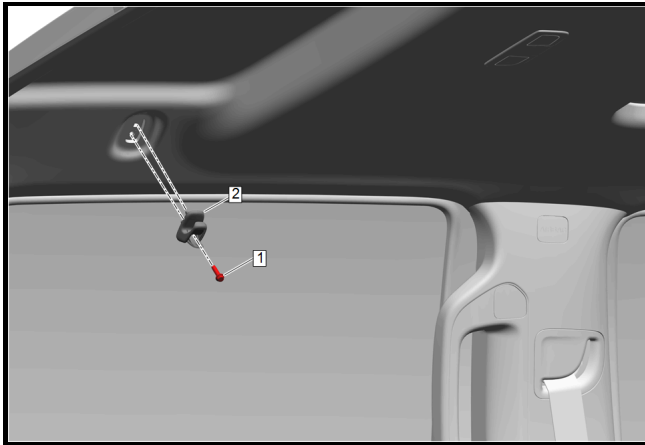


21. Coat Hook (2) » Install [2x]
22. Coat Hook Bolt (1) » Install and tighten [2x] — [Fastener Specifications](#)

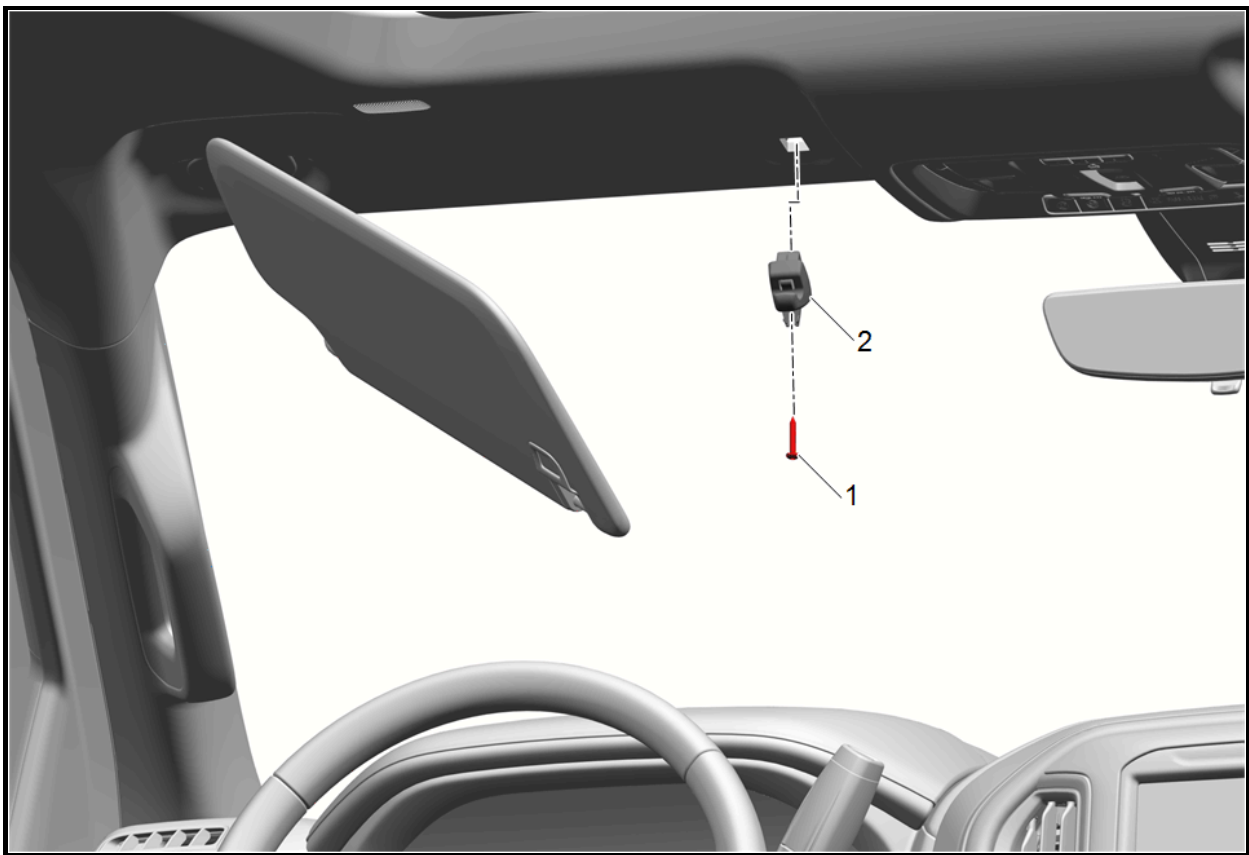

23. Sunshade Support (2) » Install [2x]

24. Sunshade Support Bolt (1) » Install and tighten [2x] — [Fastener Specifications](#)

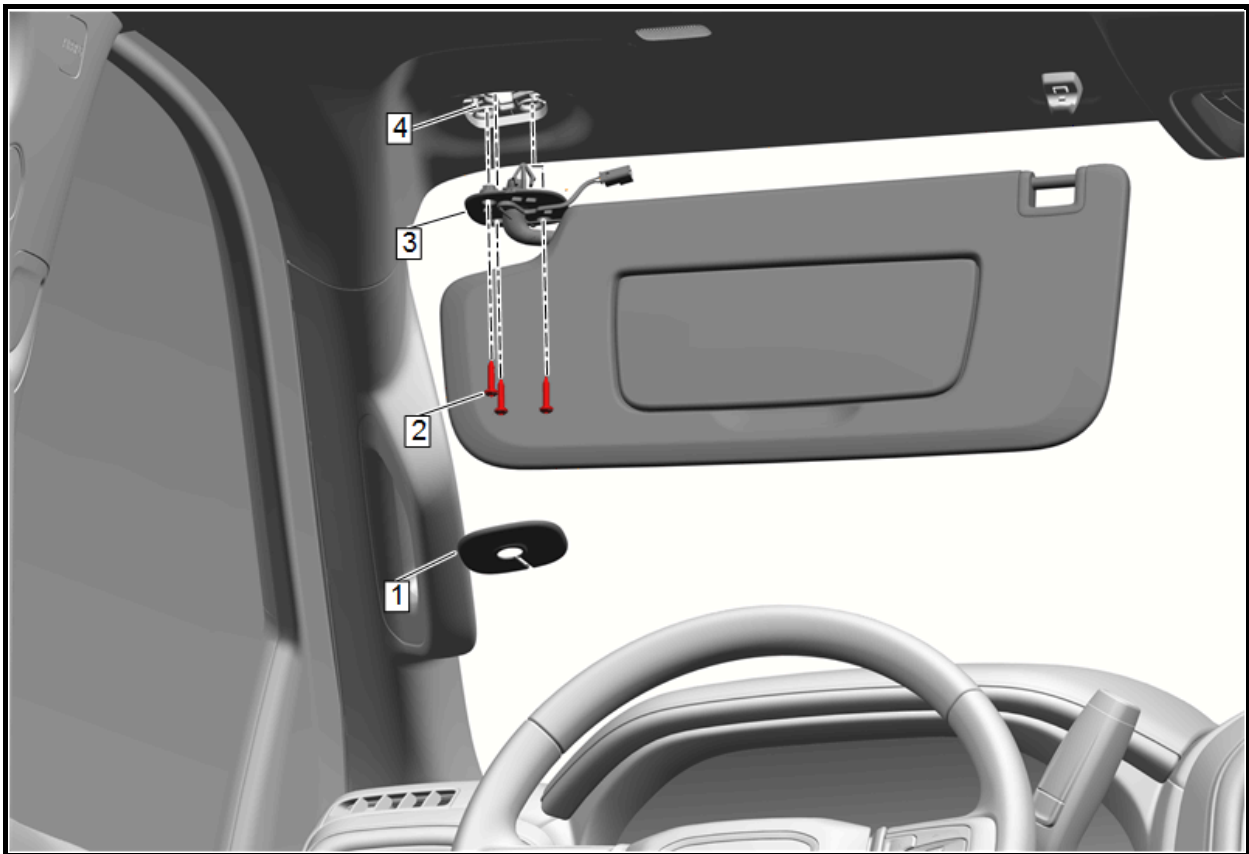


25. Connect the electrical connector. [2x]

26. Install the retainer (4) that attaches the sunshade (3) to the headliner on both sides of the vehicle.


27. Sunshade (3) » Install [2x]

28. Sunshade Bolt (2) » Install and tighten [6x] — [Fastener Specifications](#)

29. Sunshade Retainer Bolt Cover (1) » Install [2x]

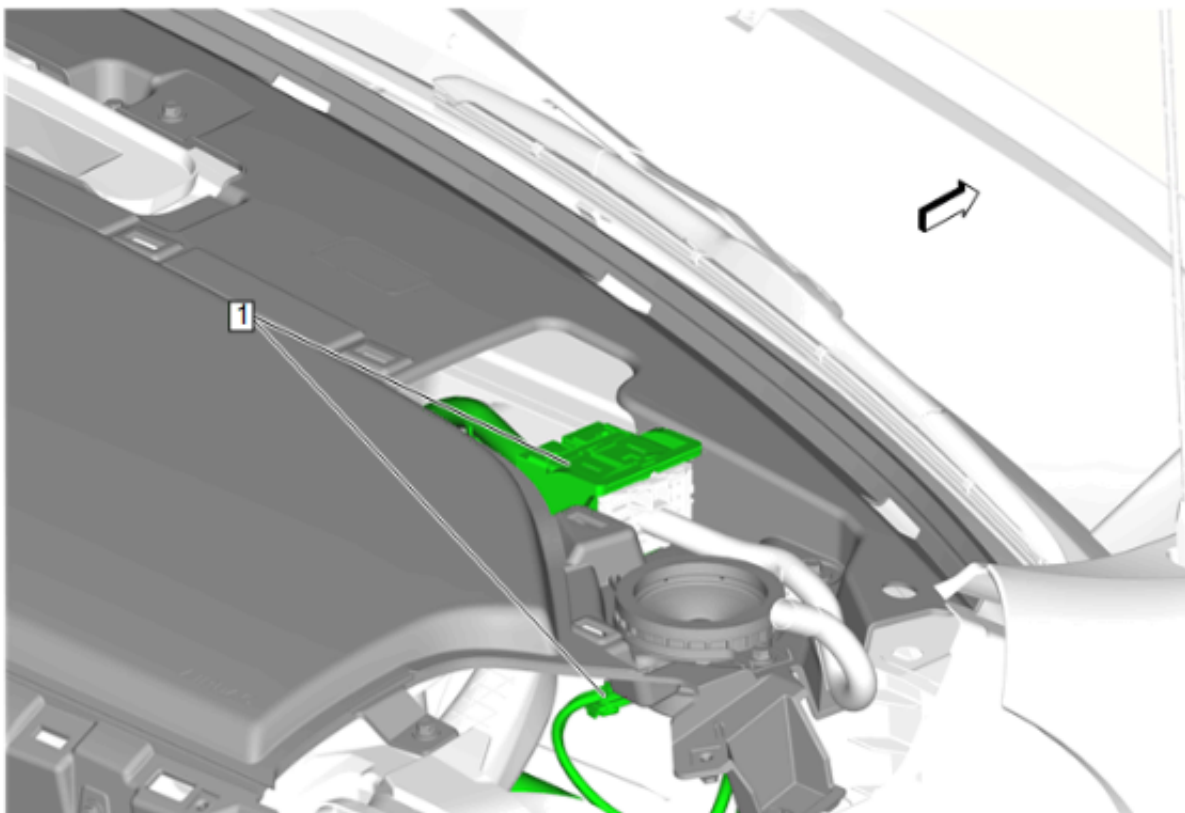


30. Connect the electrical connectors of the instrument panel wiring harness (1) to the necessary components.

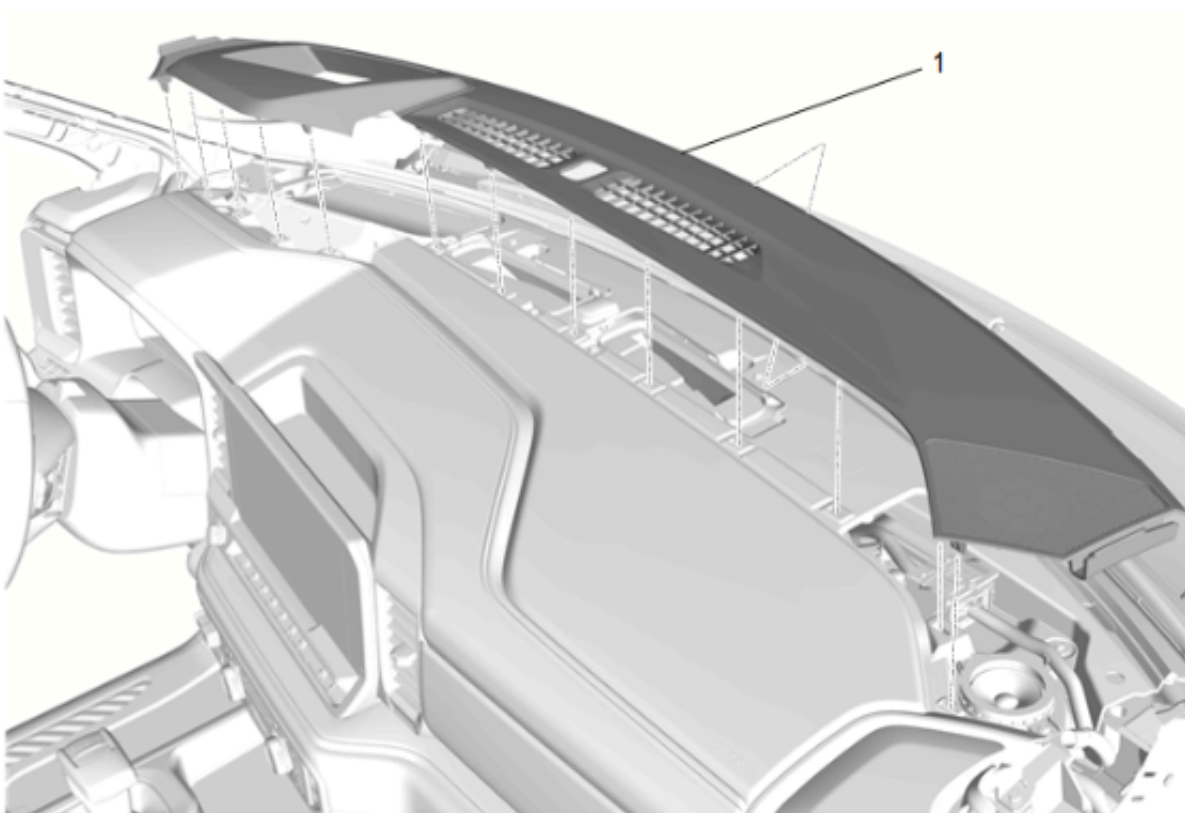



31. { If equipped } Connect the electrical connector.

32. Instrument Panel Extension (1) » Install

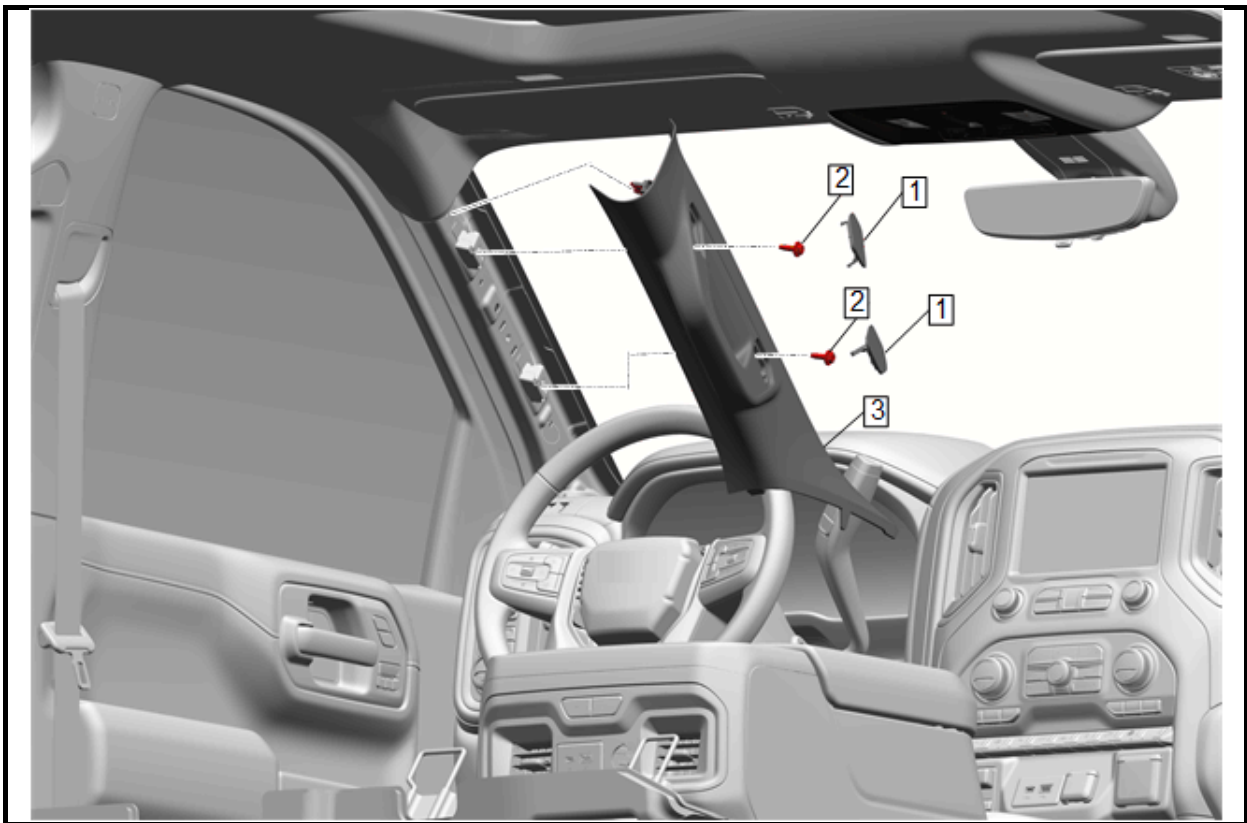


33. Connect the electrical connector and install the wiring harness retainers as necessary.

34. Ensure tab is fully seated in the instrument panel upper trim panel prior to engaging upper clip on both sides of the vehicle.

35. Windshield Garnish Molding (3) » Install [2x]

36. Windshield Pillar Assist Handle Bolt (2) » Install and tighten [4x] — [Fastener Specifications](#)

37. Windshield Pillar Assist Handle Cover (1) » Install [4x]

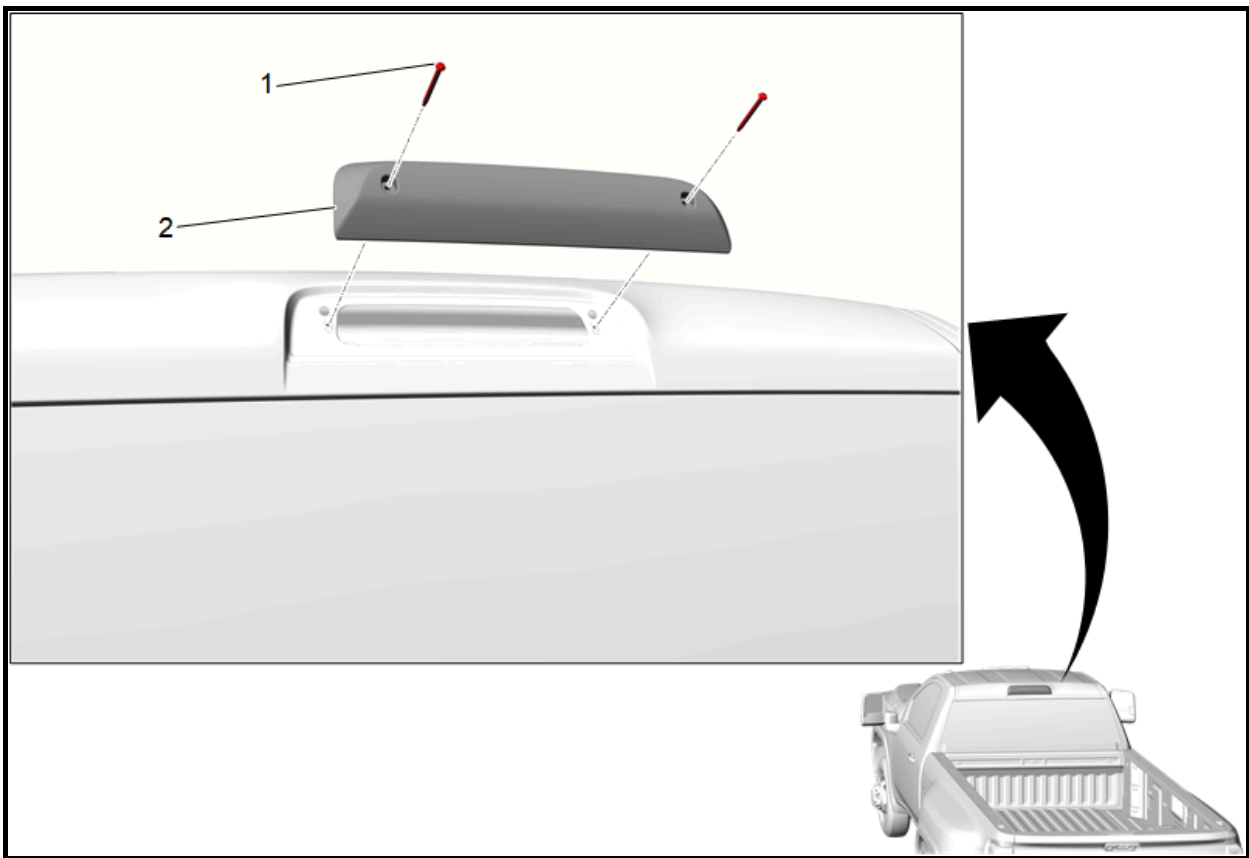

38. Connect the electrical connector.
39. High Mount Stop and Cargo Lamp (2) » Install
40. High Mount Stop Lamp Bracket Bolt (1) » Install and tighten [2x] — [Fastener Specifications](#)
41. Install the front center seat. [Front Center Seat Removal and Installation](#)